

Joyoung 九阳

# 使用说明书

Operation Instruction

九阳豆浆机

DJ13U-G91



For more products information,  
please scan the QR code.

Toll Free Number: 1-888-968-8898

Exclusive Distributor: Columbia Trading Corp.

Address: 1425 South State Street, Provo, UT 84606 USA

Manufacturer: Joyoung Company Limited

Country of Origin: China

Toll Free Number: 1-888-968-8898

[www.bestcooker.com](http://www.bestcooker.com)

型号	DJ13U-G91
外形图	
功能面板图	
加热技术	底盘加热
功能名称	五谷、干/湿豆、米糊、花果浆、粥 果仁露、果汁、温热、快速豆浆、轻松洗

说明书图片仅供参考，产品请以实物为准。

## 目录

前言	1
第一章 智能营养芯说明	2
第二章 安全使用注意事项	3-6
第三章 部件及功能	7-8
第四章 使用方法	9-11
第五章 保养和维护	11
第六章 产品安全指标	11
第七章 故障分析及排除	12-13
功能、食谱、制浆时间	14-16
装箱明细	17

## 前言

尊敬的用户：

感谢您购买九阳全自动家用豆浆机，本说明书适用于植物奶牛系列产品DJ13U-G91，产品采用超微精磨技术，通过文火熬煮，充分释放营养，带来顺滑好口感！

### ● 产品特点：

- ★超微粉碎，磨的细，更营养
- ★创新果仁露功能
- ★食品级304不锈钢



### 温馨提示：


- ★ 豆浆一定要煮熟饮用。
- ★ 制浆完成后，请尽早饮用，以维持新鲜口感。
- ★ 婴儿、肾功能衰竭、肠胃功能弱的人群应酌情选择低浓度豆浆或减少饮用量。

## 第一章 智能营养芯说明


智能营养芯包含智能温控、智能海拔识别、智能电压适应等功能。豆浆机在工作过程中实时自动适应水温及所在地区的海拔与电压，将豆浆制作程序调节至最佳状态，以保证豆浆营养充分释放，防止海拔及电压变化导致豆浆不熟、溢出、糊底等问题。

为充分保证海拔适应效果，当豆浆机使用后被搬至海拔有较大变化（海拔差1500米以上）的地区时，请按以下步骤操作：

**1** 插上电源，请在30秒以内完成2、3步骤的操作

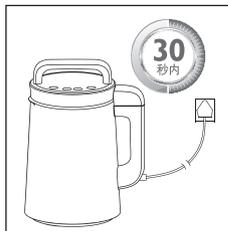

**2** 有“启动/取消”按键，请长按3秒（见下左图）；无“启动/取消”按键，请长按图示按键3秒

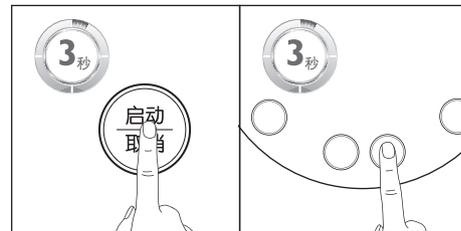

**3** 豆浆机发出三声“嘀、嘀、嘀”同时伴随着指示灯闪烁三次，即完成自适应功能（注意：如果没有以上现象，请拔下电源，重复以上操作）



### 温馨提示

- ①首次使用时，制浆时间可能延长。
- ②完成海拔识别后，豆浆机将调整为最优制作程序。

## 第二章 安全使用注意事项

 <b>警告</b>	对可能导致人员危险、重伤、重大财产损失的风险要警惕
 <b>注意</b>	对可能导致人员受伤或物品损害的风险要关注
	表示“禁止”，不能进行的内容。
	表示“强制”，务必执行的内容。

### 警告

 杯体、刀片、防溢电极、温度传感器请及时清洗干净，刀片刃口锋利，取出、擦拭、清洗时小心割伤，可佩戴保护手套。

 产品在煮浆时、工作完成后冷却前，杯体、下盖、刀片等部件温度较高，请勿触摸以免烫伤。

### 注意

 电源线插入豆浆机时必须用力插到位，否则在制浆过程中机器震动可能导致电源线松脱或过热，出现断电或燃烧。

 应照看好儿童，确保他们不论本产品在工作还是存储时，都不具有玩耍、接近本产品的可能，以免烫伤或误操作造成人身伤害。

 在具有经验的监护人或教练员的陪同下，才可让行为能力异常或没有独立行为能力的人使用本产品。

 打开包装后，请即刻将塑料袋放入垃圾桶，以免儿童玩耍，造成窒息的危险。

 机器启动前，确保机头扣合到位，不要将果核等硬物放入杯体内，否则会造成异常动作或器件损坏。

 在将产品连接电源之前，请检查本产品标示的电压是否与当地的电源电压相符，否则会损坏元器件或发生火灾。

 请在水平台面上操作，请勿在地毯、毛巾等织物、塑料、纸等易燃物上操作本产品，并远离台面边缘，以防止碰跌。

 机器工作后期或工作完成后，请勿拔插电源线插头或重新选择功能执行工作程序，否则可能造成杯体糊锅、豆浆溢出或机器鸣叫报警。

 较长时间不使用机器时，为防止出现短路等造成损害，请及时拔掉电源插头。

 机器工作时，与插座等带电物体保持一定的距离，使插头处于可触及的范围，并远离易燃易爆物品，同时电源插座接地线必须保持良好接地。

 倒豆浆时，先将机头取下再倒豆浆，以免机头滑落伤人。

 请按照“部件及功能”章节的“接浆杯组装说明”正确组装接浆杯及其把手，以防端热饮时接浆杯杯体滑落导致烫伤（仅适用于有接浆杯机型）。

 刚制作完成的豆浆温度较高，请确保自己及他人保持安全距离，请使用耐高温器皿盛放豆浆，防止豆浆溅出造成烫伤。

 制浆过程中，请勿快速提起机头，以防烫伤。

 不要用湿手插/拔电源插头，这可能引起触电。

❗ 请选择正确功能程序进行操作，且所添加食材符合食谱所要求量，否则会出现喷溅、溢出、粉碎不良、长鸣报警等异常情况，而且会影响饮品的口感。

⊘ 不得在窗帘及其他可燃材料下方或附近（或壁橱下方）使用本产品，否则可能引起火灾。

⊘ 机头、耦合器、底座、电源插座请勿进水，如果进水，请停止使用或完全擦干、晾干后使用，以免引起短路或触电。

⊘ 因杯体、底座中有加热元件，清洗时请勿将其直接放入液体中，以免造成短路或触电。

⊘ 为防止触电或短路造成伤害事故或火灾等，禁止使用有破损的电源线或插头；不要随意使用电源线或插头的替代品。

- 如果电源线损坏，必须到九阳公司售后服务部门购买专用电源线来更换。

⊘ 请勿触碰底部螺钉

⊘ 工作过程中请勿移动机器，避免食材溢出，造成烫伤、触电等伤害事故。

⊘ 如果在制浆过程中停电，请不要再选择程序进行制浆，否则可能会造成杯体糊锅、溅出或鸣叫报警。

⊘ 豆浆机未正常完成工作程序时，请勿食用杯体内饮品，以免产生过敏、中毒等身体异常情况。

⊘ 当机体出现故障或被损坏后应当交给本公司维修点、经销商进行维修、测试、调试，严禁自行拆卸。

⊘ 请勿加入70℃以上的热水制浆，以免影响口感或造成溢出、喷溅、粉碎不良、鸣叫报警等异常情况。

⊘ 请勿在室温高于30℃时预约时间超过8小时（仅适用于预约机型）。

⊘ 请勿使用机头上的提手直接提起整机。

## 使用提示

制作饮品时一定要将接浆杯、机头保护件等从杯体内取出（仅适用于有接浆杯、机头保护件机型）。

在做某些豆浆或者果蔬饮品一段时间后下盖、防溢电极有可能染色，属正常现象，不影响饮品食用，无损健康。

如制浆后钢杯体等不锈钢内表面产生局部变色、发蓝，属正常现象，是豆浆中的磷酸离子和不锈钢反应引起，对人体无害，不影响饮品性质及饮用。

富含纤维食材制作完成后可能会有部分食材挂在精磨器上，不影响食用，可放心饮用（仅适用于精磨器机型）。

使用完毕后请及时清洗，以免长时间搁置后不易清洗或影响制浆效果。清洗后的机头请不要放于杯体内，以免天气温度高而产生异味，请放置于通风的环境中。

为充分粉碎释放营养，机器打浆时出现间歇性忽快忽慢的声音属正常现象。

若制作饮品时加入的水温较低，则制浆时间相应延长（因水温、水量不同，制浆时间略有差异）。

请间隔8分钟以上，再次使用，否则将影响机器使用寿命。


请勿长时间连续制浆，否则电机将启动自动保护功能，暂时不会转动，待电机完全冷却后才能恢复使用。

预约时，制浆完毕报警时间与标准的预约时间相比较，有微小误差属于正常现象，不影响制浆质量（仅适用于预约机型）。

本产品仅适用于家庭使用，请勿用于商业用途。

本产品仅限在海拔2000米以下地区使用。

## 第三章 部件及功能

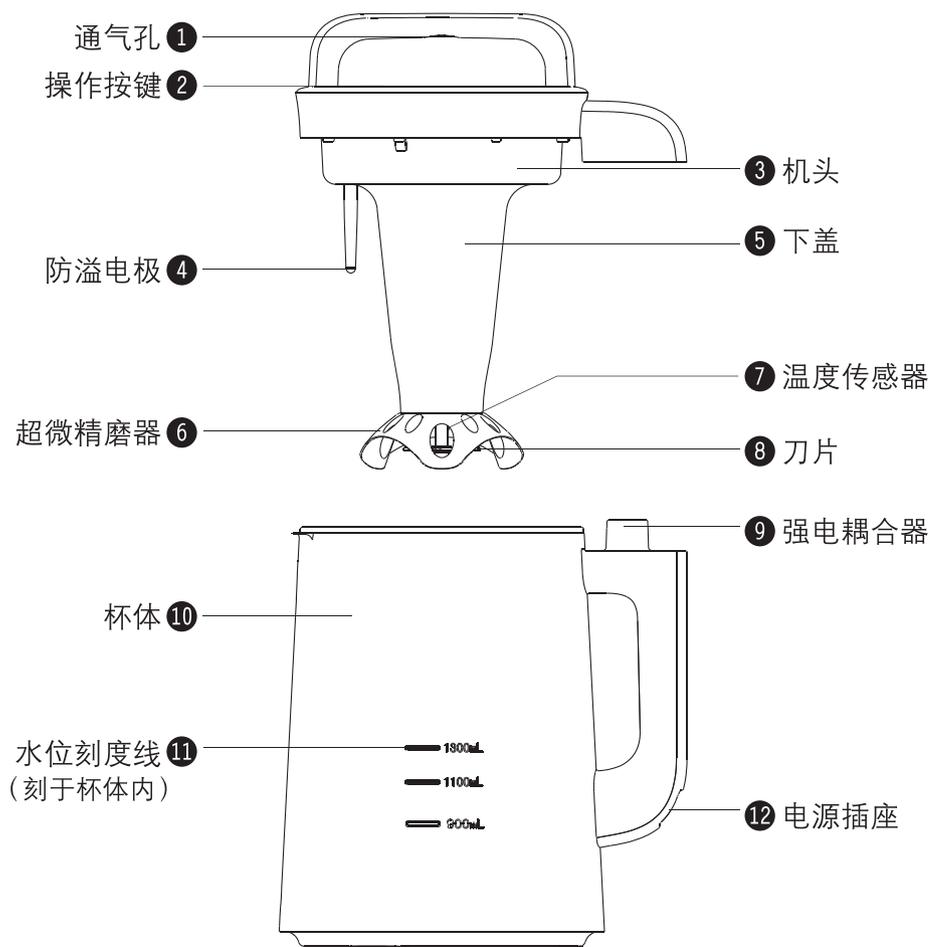


注：上图仅供参考，具体产品外观及颜色以实物为准

- ① 通气孔：用于排出机头内潮气，清洗时注意不要从此处进水。
- ② 操作按键：用于选择相应的功能，启动相应的功能程序。
- ③ 机头：本机主要部件，内有电机、电脑板等部件。
- ④ 防溢电极：用于检测豆浆沸腾，防止溢出。
- ⑤ 下盖：符合食品卫生的优质材料，用于承载电机等部件。
- ⑥ 超微精磨器：符合食品卫生的优质不锈钢材料，用于配合刀片粉碎各种食材。
- ⑦ 温度传感器：用于检测水温，当水温达到设定温度时电机开始工作。
- ⑧ 刀片：高硬度不锈钢材料，用于粉碎各种食材。
- ⑨ 强电耦合器：接通电力的安全装置，提起机头后自动断电。
- ⑩ 杯体：采用符合食品卫生标准的优质材料，用于盛放豆浆。
- ⑪ 水位刻度线：水位标识（刻于杯体内），制作饮品时，将清洗整理好的食材放入杯体内，然后加水至上下水位刻度线之间。
- ⑫ 电源插座：用于插接电源线。

### ● 接浆杯组装说明

将接浆杯把手按图示箭头方向插入到过滤杯插槽内，用力推到位。

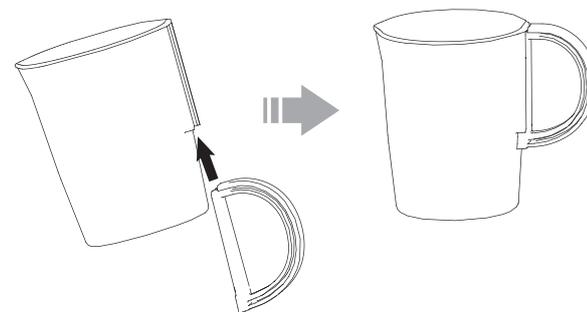


## 第四章 使用方法

本机初次使用前需对机器内部进行清洗，使用完毕后，也请及时清洗，以备下次使用。

### ● 操作步骤及说明

#### 1 加入食材和水

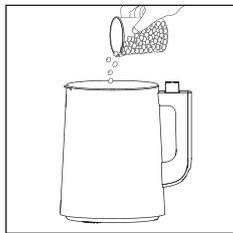


按食谱选择量取适量食材，清洗后放入豆浆机，并加水至上下水位刻度线之间。

温馨提示

- ① 请按食谱上用量进行添加，否则可能会产生糊锅现象，影响制浆效果。
- ② 本机具有无水防干烧功能，如杯体内水位过低或无水，将出现报警提示。


#### 2 接通电源

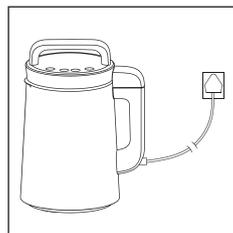

请将机头按正确的位置①放入杯体中，②插上电源线，③接通电源。


温馨提示

- ① 请用力合上机头，压紧耦合器。

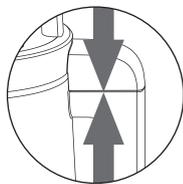

- ② 初始通电状态下，指示灯全亮。

#### 3 选择功能

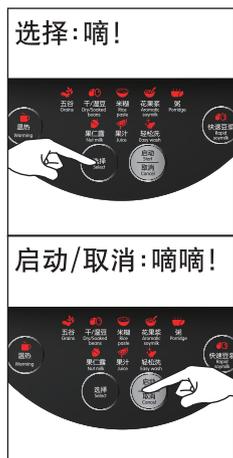

触按功能键选择所需功能，对应的功能指示灯闪烁，并伴有“嘀”一声，触按“启动/取消”发出“嘀嘀”启动功能。

温馨提示

- ① 触按功能键选择所需功能后，
  - a. 若在30秒内（“温热”、“快速豆浆”为3秒）未触按“启动/取消”键，则机器自动启动该功能；
  - b. 若1分钟内发现选择错误，可再次触按“启动/取消”键取消。然后重新选择正确功能；
  - c. 若超过1分钟，请拨下电源线，等待3-5

分钟再插上电源线，选择正确功能；  
d. 若电机已经转动，建议更换食材，重新开始。

- ② 制浆过程中，操作其它功能，将不起作用。
- ③ 如果未选择正确功能，可能导致口感不好、溢浆、糊锅等现象。
- ④ “温热”：用于对凉的饮品再加热，约60℃时，发出60秒左右的“嘀嘀…嘀嘀…”报警声，温热完成。
- ⑤ 机器在制作过程中，温度较高，杯口有水蒸气冒出，请勿靠太近，以防烫伤。

#### 4 制作完成



制作完成后，发出“嘀嘀…嘀嘀…”声音，持续1分钟，功能指示灯闪烁，即可断电，准备饮用。

温馨提示

- ① 报警结束后，自动进入2小时保温，功能指示灯闪烁；保温结束后，功能指示灯闪烁至用户自行断电（轻松洗、果汁、温热不含自动保温）。
- ② 出现异常报警，请参考“故障分析及排除”解决。
- ③ 因果蔬食材易氧化，请在半小时内饮用。
- ④ 用户可根据自己的喜好用过滤网进行过滤。

#### 5 清洗及收纳



待机器冷却后及时清洗机头、超微精磨器和杯体（图1、图2、图3）。清洗完毕后将机器擦干或晾干后存放于干燥通风处。

温馨提示

- ① 切勿将机头浸入水中，也不要用水直接冲洗机头上部，以防机头进水，发生短路现象，建议用湿毛巾进行擦拭。
- ② 切勿将杯体底座浸入水中，清洗杯体时，请注意勿用水冲洗强电耦合器，防止耦合器进水。
- ③ 勿用钢丝球等尖锐物品清洗杯体外壁。
- ④ 清洗时请注意，刀片比较锋利，小心伤手。



⑤若不能及时清洗，建议在杯体内倒入清水先浸泡一会儿后再开始清洗。如遇顽渍或顽垢，请用抹布蘸食醋或牙膏擦拭，再用清水洗净即可。

## 第五章 保养和维护

1 机器部件清洗干净后，建议擦干或自然风干后组装成整机存放。

2 请将本机存放于干燥通风的地方。

**温馨提示** 请勿放入消毒柜或烘干机中烘干、消毒。

## 第六章 产品安全指标

型号	额定电压	额定频率	净重	额定功率	电机功率	容量范围	长×宽×高 (mm)
DJ13U-G91	120V~	60Hz	2.2kg	1100W	200W	900-1300mL	260x225x360

## 第七章 故障分析及排除

故障	原因说明	对策
指示灯不亮	机头没放正	重新放正机头
	电源线插头未插到底	电源线插头插到底
指示灯亮、机器不工作	未选择功能程序	选择相应的功能程序
	杯体内未加水或加水太少	加水至上、下水位刻度线之间
	温度传感器故障	送当地售后服务部维修
电机工作不停	机头内进水	送当地售后服务部维修
加热不停	未加食材	加入食材
	机头内进水	送当地售后服务部维修
按键无反应	断电间隔短，系统未复位	断电3分钟后再通电使用
食材打不碎	加水太多或太少	加水至上、下水位刻度线之间
	食材太少或太多	按说明书要求加食材
	机器自身故障	送当地售后服务部维修
溢锅	选错功能程序	正确选择功能程序
	食材打不碎	参见“食材打不碎”的处理方法
	食材太少或太多	按说明书要求加食材
	加水太多或太少	加水至上、下水位刻度线之间
	机器自身故障	送当地售后服务部维修
糊锅	杯体未清洗干净	将杯体清洗干净
	加入食材太多	按说明书要求加食材
豆浆加工时间过长，其它正常	水温过低	使用温水
	选错功能程序	选择正确的功能程序
异常哨音	机器磨合	偶有哨音属正常情况

## 异常报警提示

提示方案	原因说明	建议对策
所有灯闪1次，同时响1声，间隔3秒循环	无水报警	请参照杯体水位线正确添加食材和水或送售后服务维修
所有灯连续闪3次，同时响3声，间隔3秒循环	防溢异常报警	请按说明书正确添加食材和水或送售后服务维修
所有灯连续闪4次，同时响4声，间隔3秒循环	加热超时报警	请按说明书正确添加食材和水或送售后服务维修
所有灯连续闪5次，同时响5声，间隔3秒循环	输入电压异常	重新插电确认是否正常或送售后服务维修
所有灯连续闪6次，同时响6声，间隔3秒循环	过零信号丢失报警	重新插电确认是否正常或送售后服务维修
所有灯连续闪7次，同时响7声，间隔3秒循环	通讯异常报警	重新插电确认是否正常或送售后服务维修
所有灯连续闪8次，同时响8声，间隔3秒循环	温度检测异常报警	送售后服务维修
所有灯连续闪9次，同时响9声，间隔3秒循环	食材过多或电机温度过高	请按说明书正确添加食材和水或送售后服务维修
所有灯连续闪10次，同时响10声，间隔3秒循环	主板温度检测异常	送售后服务维修

温馨提示

- ①如问题不能解决，切勿私自拆卸机器，请送当地售后服务部进行维修。
- ②以上内容如因型号或零部件变更与实物不符，请以实物为准，恕不另行通知，敬请谅解！

## 功能、食谱参考

产品型号		DJ13U-G91	
制浆容量		900-1300mL	
适用人数		3-5人	
功能、食材量	五谷豆浆	米润豆浆	干黄豆 $\frac{7}{10}$ 杯，干大米 $\frac{3}{10}$ 杯
		经典五谷豆浆	干黄豆 $\frac{3}{10}$ 杯，干大米 $\frac{1}{10}$ 杯，干小米 $\frac{1}{10}$ 杯，干小麦仁 $\frac{1}{10}$ 杯，干玉米渣 $\frac{1}{10}$ 杯
		花生红枣豆浆	干黄豆 $\frac{7}{10}$ 杯，花生 $\frac{3}{10}$ 杯，去核红枣 $\frac{2}{5}$ 杯（掰碎）
	干/湿豆	干豆豆浆	干黄豆1杯
		湿豆豆浆	干黄豆1杯（放入水中充分浸泡）
	米糊	纯米糊	干大米 $\frac{9}{10}$ 杯
		黑芝麻糊	干大米 $\frac{2}{5}$ 杯，花生 $\frac{2}{5}$ 杯，黑芝麻 $\frac{1}{5}$ 杯
		养心安神米糊	干小米 $\frac{1}{2}$ 杯，莲子 $\frac{1}{5}$ 杯，花生 $\frac{1}{5}$ 杯，去核红枣 $\frac{3}{10}$ 杯（掰碎）
	花果茶	玫瑰花豆浆	干黄豆 $\frac{3}{5}$ 杯，干大米 $\frac{1}{5}$ 杯，玫瑰花10朵，加水至1100mL
		苹果豆浆	干黄豆 $\frac{3}{5}$ 杯，干大米 $\frac{1}{5}$ 杯，切块的苹果1杯，加水至1100mL
	粥	咸菜粥	咸菜1杯，干大米 $1\frac{1}{5}$ 杯，加水至1100mL

产品型号		DJ13U-G91	
制浆容量		900-1300mL	
适用人数		3-5人	
功能、 食 材 量	果仁露	花生核桃露	炒熟花生 $\frac{4}{5}$ 杯, 炒熟核桃 $\frac{1}{2}$ 杯, 纯牛奶250mL, 加水到900mL
		核桃杏仁露	炒熟核桃 $1\frac{1}{5}$ 杯, 炒熟杏仁 $\frac{3}{10}$ 杯, 纯牛奶250mL, 加水到900mL
		花生红枣露	炒熟花生 $1\frac{1}{2}$ 杯, 去核红枣 $\frac{3}{10}$ 杯(掰碎), 炒熟白芝麻少许, 加水到900mL
	果汁	香滑可口奶昔	香蕉3杯, 黄瓜2杯, 鲜牛奶3杯, 纯净水3杯, 白糖适量 七
		猕猴桃香蕉汁	猕猴桃3杯, 香蕉丁2杯, 纯净水5杯
		芒果果汁	芒果4杯, 碎冰渣5杯, 纯净水6杯
	快速豆浆	干豆豆浆	干黄豆1杯
		湿豆豆浆	干黄豆1杯(放入清水中充分浸泡)

温馨提示

- ① 所加块状食材不得大于花生粒。
- ② 黑豆、黑米、核桃仁、红枣、葡萄干等食材添加过多, 可能出现异常报警。
- ③ 建议果蔬食材提前浸泡清洗。
- ④ 参照食谱添加食材。
- ⑤ 物料较多时, 请摊平, 并确保耦合器压紧。

制浆时间

功能	型号	DJ13U-G91
五谷		约30分钟
干/湿豆		约30分钟
米糊		约25分钟
花果浆		约30分钟
一般粥		约45分钟
果仁露		约25分钟
果蔬汁		约5分钟
轻松洗		约5分钟
快速豆浆		约20分钟
温热		约5分钟

以上参考时间的制浆条件是: 120V电压、中水位、23℃水、<500米海拔

## 装箱明细

物件	型号	DJ13U-G91
① 机头		1
② 杯体		1
③ 电源线		1
④ 接浆杯		1
⑤ 接浆杯把手		1
⑥ 过滤网		1
⑦ 量杯		1
⑧ 清洁刷		1
⑨ 说明书		1
⑩ 食谱		1

(所有数据由九阳研发中心提供, 若有变更恕不另行通知)

Model	DJ13U-G91
Product picture	
Control panel	
Heating technology	Bottom heating
Functions	Grains, Dry/Soaked beans, Rice paste, Aromatic soymilk, Porridge, Nut milk, Juice, Warming, Rapid soymilk, Easy wash

Specification picture for reference only, please refer to the product.

## Contents

Preface .....	20-24
Chapter I Intelligent Chip .....	25
Chapter II Important Safeguards .....	26-29
Chapter III Parts&Function .....	30-31
ChapterIV Use Method .....	32-34
ChapterV Maintenance .....	34
ChapterVI Product safety indicators .....	34
ChapterVII Troubleshooting & Solution .....	35-37
Function& Recipe&Pulping Time .....	37-39
Packing List .....	40

## Preface

Congratulation and thank you for your purchase of Joyoung automatic household soymilk maker. This instruction manual is applicable to plant cows series products DJ13U-G91. This product uses ultra-fine grinding technology, which fully releases the materials' nutrition by slow fire, tasting smooth.

### ● Features of product:

- ★ Ultra-fine grinding, more tiny and nutritious;
- ★ Innovative nuts milk function;
- ★ Food grade SUS304.



### Notes:

- ★ Drink the well cooked soymilk.
- ★ Finish the soymilk ASAP in the condition of room temperature to maintain the fresh taste.
- ★ Baby, people who suffers kidney failure of poor gastrointestinal function should choose low consistency soymilk or drink less.

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all Instructions.
2. Do not touch or move the hot surfaces during the brewing cycles. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Avoid contacting moving parts.
14. Do not let water into the coupler, please make sure it is dry before use.
15. Clean the Jug, blade, electrode, grinding device and water temperature probe timely. The blades are sharp, and may cause injury if improperly handled.
16. Please do not reset the program when it is on the later period or finished. It will cause boiling over.

17. Take out the head before pouring soymilk.
18. Clean the grinding device timely.
19. The appliance is taking high-speed electric machine; it is normal that turns up fast and slow voice intermittence.
20. If the electricity goes off when the appliance working (esp. on later period or finished), do not let it work again. Otherwise it will cause the heating element scorched.
21. If the water is cold, it will take more than 20 minute to finish.
22. When making the rice paste, corn juice or five cereals porridge, the lower cover may be dyed. It is normal and no harm to health.
23. Do not immerse the jug into water directly. Do not put the head into the jug after cleaned, please set it into the place ventilated.
24. The following statements apply to power cord is less than 4-1/2 ft (1.4 m):
  - a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
  - b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
  - c) If a long detachable power-supply cord or extension cord is used,
    - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
    - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord,
    - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
25. Household Use Only.
26. Unplug before inserting or removing parts.
27. Always operate blender with cover in place.
28. Never add to container while appliance is operating.
29. Container must be properly in place before operating appliance.
30. Save these Instructions.

Lorsque vous utilisez des appareils électriques, des précautions de sécurité de base doivent toujours être respectées , y compris ce qui suit :

1. Lire toutes les instructions .
2. Ne pas toucher ou déplacer les surfaces chaudes pendant les cycles de brassage . Utiliser les poignées ou les boutons.
3. Pour protéger contre l'incendie , de choc électrique et de blessures , ne pas immerger le cordon , la fiche ou dans l'eau ou tout autre liquide .
4. Une surveillance étroite est nécessaire lorsque l'appareil est utilisé par ou près des enfants .
5. Débranchez l'appareil lorsqu'il n'est pas utilisé et avant de le nettoyer . Laisser refroidir avant de mettre ou d'enlever des pièces et avant de le nettoyer .
6. Ne pas utiliser un appareil avec un cordon ou une fiche détériorés , après un mauvais fonctionnement de l'appareil , ou a été endommagé d'une manière quelconque . Retourner l'appareil au centre de service autorisé pour examen , réparation ou réglage .
7. Le utilisation d'accessoires non recommandés par le fabricant de l'appareil peut provoquer un incendie , de choc électrique ou de blessures.
8. Ne pas utiliser à l'extérieur
9. Ne pas laisser le cordon pendre de la table ou du comptoir , ou toucher des surfaces chaudes .
10. Ne pas placer sur ou près d'un brûleur à gaz ou électrique , ou dans un four chauffé .
11. Toujours brancher l'appareil en premier , puis brancher le cordon dans la prise murale . Pour débrancher , éteindre toute commande en «off», □ puis retirer la fiche de la prise murale .
12. Ne pas utiliser l'appareil pour d'autres fins que celles prévues .
13. Éviter tout contact avec les pièces mobiles .
14. Ne laissez pas d'eau dans le coupleur , s'il vous plaît assurez-vous qu'il est bien sec avant utilisation .
15. Nettoyez la lame , électrode , dispositif de broyage cruche et la sonde de température de l'eau en temps opportun . Les lames sont tranchantes et peuvent provoquer des blessures s'il n'est pas manipulé .
16. S'il vous plaît ne pas réinitialiser le programme quand il est sur la dernière période ou fini. Il fera déborder.



17. Sortez la tête avant de verser le lait de soja .
18. Clean le dispositif de broyage en temps opportun .
19. Le appareil prend machine électrique à haute vitesse , il est normal que tourne vite et lent intermittence de voix .
- 20 . Si l'électricité s'éteint lorsque l'appareil de travail (en particulier sur la période plus tard ou fini ) , ne laissez pas fonctionner à nouveau . Sinon, il va provoquer l'élément chauffant brûlé .
21. If l'eau est froide , il faudra plus de 20 minutes pour terminer.
22. When faire la pâte de riz, jus de maïs ou cinq céréales gruau , le couvercle inférieur peut être teint . Il est normal et sans danger pour la santé .
23. Ne pas immerger le pot dans de l'eau directly.Do pas mettre la tête dans le pot après nettoyage , s'il vous plaît mettre dans l'endroit aéré.
24. Les énoncés suivants s'appliquent à cordon d'alimentation est inférieure à 4-1/2 pi ( 1,4 m ) :
  - a) Un cordon d'alimentation court ( ou amovible cordon d'alimentation ) doit être fourni pour réduire les risques d'enchevêtrement ou de trébucher sur un cordon plus long .
  - b) Des cordons d'alimentation détachables plus longs ou bien des rallonges sont disponibles et peuvent être utilisés avec prudence dans leur utilisation .
  - c) Si un long cordon d'alimentation détachable ou d'une rallonge ,
    - 1 ) La puissance électrique indiquée sur le cordon d'alimentation amovible ou de l'extension cordshould être au moins aussi élevée que la puissance électrique de l'appareil ,
    - 2 ) Si l'appareil est de type mis à la terre , la rallonge doit être un cordon terre - type3 - fil , et
    - 3 ) Le cordon plus long soit placé de sorte qu'il ne soit pas étalé sur le comptoir haut ortable où il peut être tiré par un enfant ou faire trébucher .
25. Household Use Only.
26. Unplug avant d'insérer ou de retirer des pieces.
27. Always fonctionnent appareil avec le couvercle en place.
28. Ne jamais ajouter de récipient tout appareil fonctionne.
29. Container doit être bien en place avant appareil d'exploitation .
30. Save ces instructions .

## Chapter I Intelligent Chip

Intelligent chip has the functions of smart thermostat, smart altitude recognition, intelligent voltage adjustment, etc. During the working time, soymilk maker automatically adapts to the water temperature as well as altitude and voltage in real time, which adjusts the soymilk production process to the optimum state to ensure the full release of materials' nutrition and prevent the altitude and voltage changes leading the issues that soymilk is unboiled, overflowed, burnt, etc.


In order to fully guarantee altitude acclimatization effect, please operate the product as follows when the used soymilk maker is moved to an area where the altitude changes a lot (1500 meters altitude difference).

- 1 Connect the power, finish the step 2 and step 3 within 30 seconds.
- 2 There's a "Start/Cancel" button, please press it for 3 seconds (shown in the left picture); if no "Start/Cancel" button, please press the rightmost button for 3 seconds (shown in the right picture).

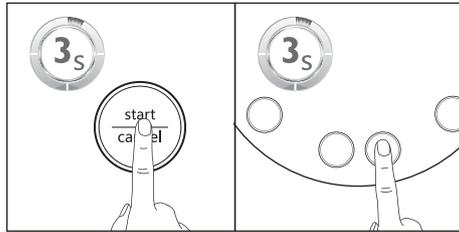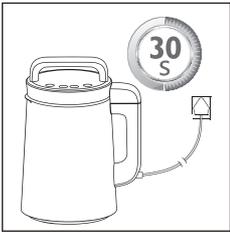

- 3 There will be hints "beep, beep, beep" with three times light shining, it means the soymilk maker finish its self-adaptive function. (note: if there's no such phenomenon, please disconnect the power and restart it).

beep!beep!beep!

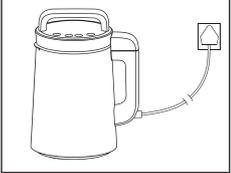

### Notes

1. When first use, it may prolong the working time.
2. After the altitude recognition, the soymilk maker will adjust to the optimum program.

## Chapter II Important Safeguards

 Warning	Warning people should pay attention about the risks which will cause serious body injury and financial lose.
 Attention	Warning people should pay attention about the risks which would cause body injury and damage of other goods.
	This symbol means the actions we forbidden to do.
	This symbol means the actions we must to do.

### Warning



Pls clean the jug, blade, Electrode, Thermostat in time after using, Pls be careful when clean the blade, since it's sharp, use a glove if necessary.



Pls don't touch the jug, lower cover, blade etc when the machine is working or just finishing working, since those parts are hot that time, touching will cause scald.

### Attention



Pls make sure the power cord is right connected and it's firm to the machine, in case of the power cord loosing during working, which might causing power off or fire.



Whatever the machine is working or in storage, pls keep children away from the machine, in case of causing injury.

! Please don't let the incapable people and children use this product without supervision.

! Pls install the cup and handle according to the "instruction of installing cup" in chapter II

! Pls operate the machine on the horizontal desk, and keep the machine away from the inflammable stuff, such as carpet, towel, plastic, paper etc. In case of dropping, pls keep the machine away from the edge of desk

! Pls unplug the machine if it won't be used in a long time, in case of short circuit causing damage.

! Pls take off the head first before pulling out the drink, in case of head slipping causing injury.

! Pls collecting the soymilk by high temperature resistance container and paying

⊘ Pls don't plug or unplug the power cord by wet hand, in case of electronic shock.

⊘ Attention to protect yourself, since the just finished soymilk is hot.

! Pls throw away the plastic bag immediately after open the package, in case of children play with it causing stifle.

! Pls check if the Voltage of the machine is suitable for local Voltage before using, if not, pls don't use it, in case of damage the machine and causing fire.

! Pls put the ingredients according to recipe and chose the right function, in case of influencing the flavor or causing overflow, bad grinding, alarming etc problems.

! When the machine is working, please keep it away from the electrified objects such as socket, and don't place it near the objects which are easy on fire or exploding, Meantime, please make sure that the machine is well grounded.

! Pls make sure the head is right installed before the machine start working. And don't put hard thing into the jug, in case of causing problem or damage the machine

⊘ Components & Functions . In case of the cup dropping when it's not right installed. ( only suitable of model with cup).

! If the electricity goes off during the appliance working (especially in the late period or when the machine finish working), pls don't let it work again. Otherwise it will cause boiling over, alarming and other problems

⊘ Using the machine near the curtain or other inflammable place if forbidden, which may causing fire.

⊘ Pls make sure the head, Strong electric coupler, base, socket don't get into water, if it's wet, pls make them dry before using, in case of causing short circuit or electronic shock.

⊘ Pls don't move the machine during it working, in case of the drink spilt out causing scald or electronic shock etc.

⊘ Pls don't use the damaged power cord or the power cord not supplied by JOYOUNG, in case of electronic shock, short circuit causing fire.  
● ( Pls go to the JOYOUNG after service place to get new power cord if it's damaged.)

⊘ Pls don't touch the screws at bottom.

⊘ Pls don't lift up the heat during the machine is working, in case of scald.

⊘ Pls don't immerse the machine into the water, there are electron components in machine. The water will cause short circuit or

⊘ If the machine has not finish the program, pls don't drink the drink, in case of causing allergy, poisoning or other problem.

⊘ Pls don't detach the machine by yourself when it has problem, Pls take the problem machine to the after service for help.

⊘ Pls don't add the water which is over 70°C, the hot water might cause bottom burn, spilt out, bad grinding or alarming problem.

⊘ Pls don't make a appointment over 8 Hours when the room temperature over 30 °C.

⊘ Pls don't lift up the machine by grabbing head.

## Using tips

Pls add the water in the middle of up and down water mark.

In order to release the nutrition well, the machine will has some intermittent noise when it' s working, which is normal.

Some special ingredient will make the lower cover and Electrode colored, which is normal.

If there is partial jug become blue or color changing after making soymilk, which is cause by chemical reaction between phosphate ions and stainless steel. It' s harmless, which won' t have influence on the drink.

Please clean the machine in time after using, And please don' t place the cleaned head directly into the jug, which should be stored in the ventilation environment, in case of smell after long time storage

The machine only suitable for family using, Pls don' t use it in commercial way.t

Pls take out the cup before making drink(Only suitable for the model with cup)

If the water used is cold, the working will last longer

Do not use the machine continuously, otherwise the motor will start self protecting and stop working, till the motor cooling down.


When using the machine continuously, please cool down the machine at least 10 minutes after each time. Otherwise the motor' s life time will be affected.

There will be little time error between standard appointed time and the finishing alarming time, which is normal and won' t influence the drink quality. ( Only suitable for model with appointed function)

When food contain fiber is finished cooking, some food may stick on the grinding device, which is normal.

The machine only suitable for using under altitude under 2000m.

## Chapter III Parts&Function

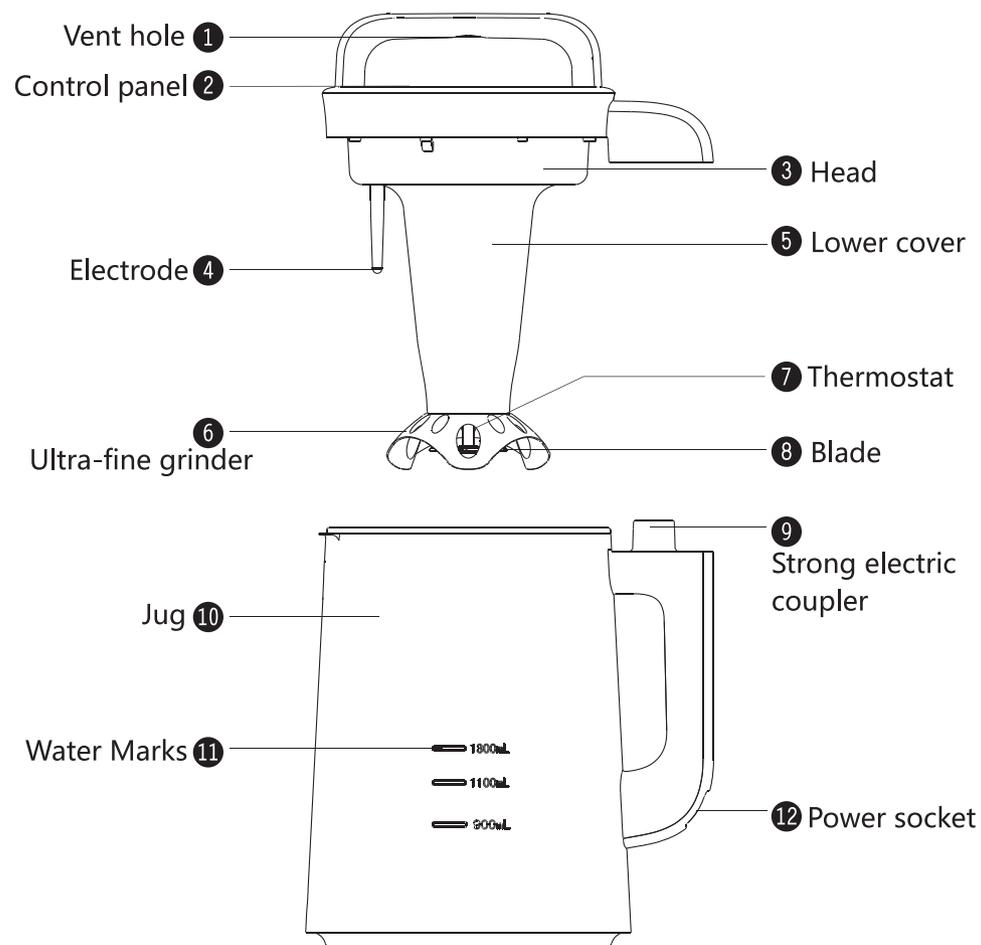


Note: The picture is for reference only, the specific kind prevail.

- ①Vent hole: Discharge the humidity inside, please don't let water in through this hole when washing.
- ②Control panel: Select and start different functions.
- ③Head: Main part of this machine with motor and computer panel inside.
- ④Electrode: It prevents the soymilk from boiling over.
- ⑤Lower cover: Made from fine material of food hygienic standard and used for holding parts like motor.
- ⑥Ultra-fine grinder: Made from fine stainless material of food hygienic standard and used for grinding food together with blade.
- ⑦Thermostat: Used for detecting water temperature. When water temperature reaches the set one, motor starts working.
- ⑧Blade: Made from super hard stainless material and used for crushing food.
- ⑨Strong electric coupler: Power safety device, and it will auto power off when you take out the head.
- ⑩Jug: Made from fine material of food hygienic standard and used for containing soymilk.
- ⑪Water Marks: Marks for measuring water volume.
- ⑫Power socket: Used for connecting power cord.

### ● Cup assembling instruction

Put the cup handle into the cup slot by direction of the arrow, and push it tightly in place.

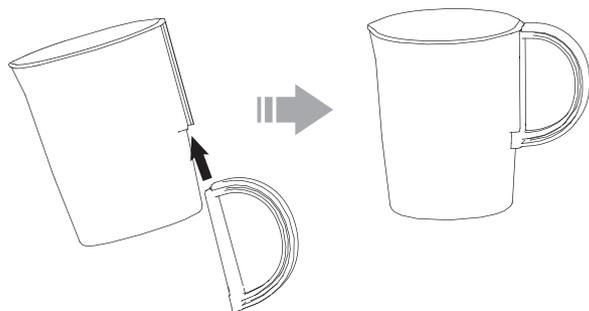

## Chapter IV Use Method

Before first use, the inner side of the product need to be thoroughly cleaned. And after using, please clean it again in time for next using .

### ●Operation Steps&Instruction


#### 1 Add ingredients and water



Please measure the ingredients according to the recipe book, and add the cleaned ingredients into the jug. And then add the water between the upper and lower water scale.


- Notes**
- ① Please add ingredients as recommended in the recipe book, or it may cause burning at the bottom of the jug, which will have bad effect on making drinks.
  - ② The machine is characterized by drying-proof function if there's no water, so it will alarm if the water is not enough or even no water.

#### 2 Connect the power

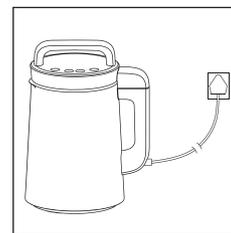

Please place the head in to the jug correctly as showed①, connect the cord with machine as showed ②, and then connect the power as showed③.

- Notes**
- ① Please fasten the jug mouth well, and press the coupler tightly.
  - ② All indicators light in the initial connecting power state.

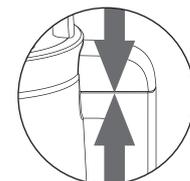

#### 3 Choose menu function



Touch the function button you need, the respective light is on with the sound of "beep" . And touch the "Start/Cancel" button, the machine will start working with the sound of "beep,beep" .

- Notes**
- ① After touching respective button to select the respective function,
    - a.If the button of "Start/Cancel" is not pressed within 30s, the machine will automatically start this function.
    - b.If you choose the function mistakenly after the machine works for less than 1 minute, you can press the "Start/Cancel" button to cancel the function and select the new function.
    - c.If it is more than 1 minute, you can disconnect the power cord and wait for 3-5 minutes to reconnect the power cord and select the new function.
    - d.If the motor had already worked before you cancel the function, the ingredients are suggested to be replaced before restart.

- ② When the selected function is working, other functions are not available.
- ③ If wrong functions are selected, it may cause bad taste, overflowing, over-burnt etc.
- ④ "Warming" : used to warm the cool drinks. It will alarm about 60 seconds with the sound of "beep...beep" when it is 60°C.
- ⑤ When working, the temperature of machine is high and there' s some steam from the jug. Please do not stay too closed, in case of scalding.

#### 4 Finish




When the selected program is finished with the sound of "beep" , the respective function button will flicker with 1 minute beep sound, which means you can disconnect the power cord to drink it.

##### Notes

- ① after alarming, the machine keeps warm automatically for 2 hours; the indicator light twinkles. After that, indicator light twinkles until the power cord is disconnected.(Easy wash, juice, warming do not have the keeping warm automatically function)
- ② If abnormal alarming appears, please refer to "Troubleshooting & Solution" chapter to solve the problem.
- ③ Since the fruits and vegetable is easy to oxidize, please drink it within half an hour.
- ④ Customer can filter the drinks by using the filter on their own reference.



#### 5 Clean and storage

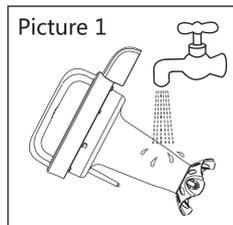

Clean the head, ultra-fine grinder and the jug (P1, P2 and P3) after the machine is cooled down. When finish cleaning, dry the machine and store it in a dry and ventilated place.

##### Notes

- ① Do not immerse the head into water or wash it directly in case of immersing it or short circuit. Suggest scrub it with wet towel.
- ② Do not immerse the jug base into water when cleaning;do not clean the strong electric coupler with water, in case of making the water in it.
- ③ Do not use steel wool or other sharp objects to clean the inside of jug.
- ④ Please pay more attention to the sharp blade when cleaning, in case of hurting your hands.

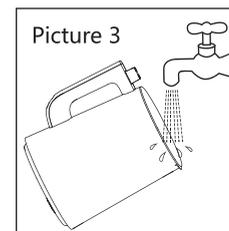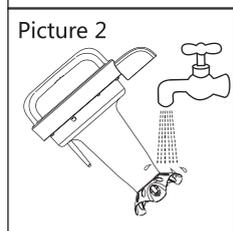

- ⑤ If you could not clean it timely, please add some water into jug, soak for a moment, and then clean it; if there are some strains or dirt, please clean it with a clean block dipping in vinegar or toothpaste, and then clean it with water.

## Chapter V Maintenance

- 1 When finish cleaning, suggest to store it after air-drying.
- 2 Suggest store the machine in a dry and ventilated place.

##### Notes

Do not place it in the disinfection cabinet or dryer for disinfecting and drying.

## Chapter VI Product safety indicators

Model	Rated voltage	Rated frequency	N.W	Rated power	Motor power	Capacity	Length*width*height (mm)
DJ13U-G91	120V-	60Hz	2.2KG	1100W	200W	900-1300mL	260*225*360

## Chapter VII Troubleshooting & Solution

Problem	Possible Reasons	Solution
No light for the indicator	The head of grinder is placed improperly	Replace the head properly
	The power plug connects improperly	Reconnect the powerplug tightly
No operation, but the indicator lights up	Do not choose the functional program	Choose the relative function
	No water or little water in the jug	Add water between the upper and lower water scale
	The temperature sensor is out of work	Contact local service center for checking and repairing
Non-stop operation	Water sinks into the grinder	Contact local service center for checking and repairing
Non-stop heating	No ingredients input	Put the ingredients inside the mixed up
	Water sinks into the grinder head	Contact local service center for checking and repairing
No response after pressing function button	The disconnected time is too short to restart the system	Disconnect power cord for 3 minutes, then reconnect it
Unbroken piece of ingredients	Not enough or excessive water	Add water between upper and lower water scale.
	Not enough or excessive ingredients input	Add ingredients according to instruction manual
	Internal problem	Contact local service center for checking and repairing
Bumping of ingredients	Wrong function selected	Select proper function
	Unbroken piece of ingredients	Refers to the method of "Troubleshooting"
	Too much or too less ingredients	Add ingredients according to instruction manual
	Too much or too less water	Add water between upper and lower water scale
	Internal problem	Contact local service center for checking and repairing

Problem	Possible Reasons	Solution
Pot stick	The container is not cleaned completely	Clean the container completely
	Excessive ingredients input	Add ingredients according to instruction manual
Long operation time, but other conditions are normal	The input water temperature is too low	Use warm water instead
	Wrong process	Choose the correct process
Abnormal noise	The running of machine	It' s normal to make noise sometimes

### Unusual alarming

Alarming	Reason	Solution
All the light flicker 1 time with once alarming ring. (the cycle is 3 seconds)	Alarming for no water	Please add water between the marks with reference to the manual or contact service center
All the light flicker 3 times with three times alarming ring. (the cycle is 3 seconds)	Alarming for unusual spilling-proof	Please add materials and water with reference to the manual or contact service center
All the light flicker 4 time with four times alarming ring. (the cycle is 3 seconds)	Alarming for overheating	Please add materials and water with reference to the manual or contact service center
All the light flicker 5 times with five times alarming ring. (the cycle is 3 seconds)	Alarming for wrong voltage	Please reconnect the power to check whether it is normal or contact service center
All the light flicker 6 times with six times alarming ring. (the cycle is 3 seconds)	Alarming for zero cross signal losing	Please reconnect the power to check whether it is normal or contact service center
All the light flicker 7 times with seven times alarming ring. (the cycle is 3 seconds)	Alarming for unusual message	Please reconnect the power to check whether it is normal or contact service center
All the light flicker 8 times with eight times alarming ring. (the cycle is 3 seconds)	Alarming for unusual temperature	contact service center
All the light flicker 9 times with nine times alarming ring. (the cycle is 3 seconds)	Alarming for excessive ingredients or high temperature of the machine	Please add materials and water with reference to the manual or contact service center
All the light flicker 10 times with ten times alarming ring. (the cycle is 3 seconds)	Alarming for unusual temperature of main board	contact service center

Notes

- 1.If there is any hard problems, please do not open the appliance by yourself, please contact service center or contact with the service line:1-888-968-8898 for help.
- 2.If there;s any change of model or accessory, please forgive us that we will not notify specially.

### Function & Recipe

Product model		DJ13U-G91	
Capacity		900-1300mL	
Suitable for		3-5 people	
Function & Dosage	Grains	Rice soymilk	7/10 cup dry soybeans, 3/10 cup dry rice.
		Classic five grains soymilk	3/10 cup dry soybeans, 1/10 cup dry rice, 1/10 cup dry millet, 1/10 cup dry wheat, 1/10 cup dry corn grit.
		Peanut and red dates soymilk	7/10 cup dry soymilk, 3/10 cup peanuts, 2/5 cup pitted dates( break them).
	Dry/wet beans	Dry bean soymilk	1 cup dry soybeans .
		Wet bean soymilk	1 cup dry soybeans, 1 cup dry soybeans (soak them completely in water).
	Paste	Pure paste	9/10 cup dry rice .
		Black sesame paste	2/5 cup dry rice, 2/5 cup dry walnut( break them), 1/5 cup black sesame .
		Spirit-quieting paste	1/2 cup dry millet, 1/5 cup lotus seeds, 1/5 cup peanuts, 3/10 cup pitted dates( break them).

Product model		DJ13U-G91	
Capacity		900-1300mL	
Suitable for		3-5 people	
Function & Dosage	Aromatic soymilk	Rose soymilk	3/5 cup dry soybeans, 1/5 cup dry rice, 10 roses, and add water to 1100mL
		Apple soymilk	3/5 cup dry soybeans, 1/5 cup dry rice, 1 cup chopped apples, and add water to 1100mL
	Porridge	Porridge with salted vegetables	1 cup salted vegetables, 6/5 cups dry rice, and add water to 1100mL
	Nuts milk	Peanut and walnut milk	4/5 cup cooked peanuts, 1/2 cups cooked walnuts, 250ml pure milk , and then add water to 900ml.
		Walnut and almond milk	6/5 cup cooked walnuts, 3/10 cup cooked almonds, 250ml pure milk, and then add water to 900ml.
		Peanut and red dates milk	3/2 cup cooked peanuts, 3/10 cups pitted dates (break them), little cooked white sesame seeds, and then add water to 900ml.
	Jucie	Milk shake	3 cups bananas, 2 cups cucumbers,3 cups fresh milk, 3cups pure water, and the right amount of sugar.
		Wiki and banana juice	3 cups wikis, 2 cups banana blocks, and 5 cups pure water.
		Mango juice	4 cups mangoes, 5 cups crushed ice, 6 cups pure water
	Fast soymilk	Dry bean soymilk	1 cup dry soybeans .
Wet bean soymilk		1 cup dry soybeans, 1 cup dry soybeans (soak them completely in water).	

Notes

- ① The size of ingredients added in can not be bigger than a peanut.
- ② It may cause alarming if add in too many ingredients like black soybean, black rice, walnut kernel, red date and raisin.
- ③ Suggest to clean fruits and vegetables in advance.
- ④ Add ingredients according to recipe.
- ⑤ Make sure coupler is connected well when there are too many ingredients inside.

## Working time

Model Function	DJ13U-G91
Grains	About 30 minutes
Dry/Soaked beans	About 30 minutes
Rice paste	About 25 minutes
Aromatic soymilk	About 30 minutes
Porridge	About 45 minutes
Nut milk	About 25 minutes
Juice	About 5 minutes
Easy wash	About 5 minutes
Rapid soymilk	About 20 minutes
Warming	About 5 minutes

The condition of the making time above: 120V, medium water scale, 23°C water temperature, altitude lower than 500m.

## Packing list

Model Packing list	DJ13U-G91
① Head	1
② Jug	1
③ Power cord	1
④ Cup	1
⑤ Cup handle	1
⑥ Measuring cup	1
⑦ Cleaning brush	1
⑧ Manual	1
⑨ Recipe book	1
⑩ Filter	1

(all the data provided by Joyoung R&D center, please forgive us that we won't notify you if there are some changes).