

## CLEANING AND MAINTENANCE

1. Before cleaning, always turn off the appliance and unplug the power plug from the power supply. Allow the heating base to completely cool down, then remove the stainless steel bowl from the heating base.
2. Clean the stainless steel bowl and glass lid with a little dishwashing detergent added. Rinse thoroughly and dry completely.
3. Do not use any abrasive scouring agents, steel wool, metal objects, hot cleaning agents or disinfectants, since they can damage the appliance.

**Remark:** "Bluish" or "rainbow" discoloration is common on stainless steel cookware and is caused by minerals or salts in food and water. Water stains can be removed with a sponge dampened in vinegar or lemon. Water stains also can be removed by adding vinegar or lemon into water to boil for 1 minute.

4. Wipe clean the heating base with a damp cloth. Do not immerse the heating base and power cord into water or other liquids or wash them in the dishwasher.
5. When completely dry, store the appliance in a dry, safe place so that it is protected from dust, shocks, heat and moisture.

## PRODUCT SPECIFICATIONS

PRODUCT CATEGORY	ELECTRIC 2 WAY HOT POT [Shabu-shabu]
MODEL NO.	NEC-3050
RATING VOLTAGE	110V-120V~ 50/60Hz
WATT	1600W

## SERVICE & IMPORTANT NOTICE

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.

### Limited Warranty

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Authorization Number and freight prepaid with proof of purchase. We will not accept any returns of merchandise without an applicable RMA#.

# NARITA®

## Electric 2 Way Hot Pot [Shabu-Shabu] INSTRUCTION MANUAL



MODEL: NEC-3050

Please read the instructions in detail before use.  
Household use only.


## IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following.

1. Read all instructions.
2. Be sure to use an earthing switch socket, and the socket must be inserted tightly. Never use a universal socket shared with others electrical appliances.
3. The inner pot, heating base and heating plate are very hot when in use or within some time after shutdown, never touch them with your hand. Always allow it to cool down before handling.
4. Fill water or soup no more than 80% full during operation. Spillage from overflow when boiled may cause electric hazard.
5. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or heating base in water or other liquid.
6. Be sure to use the specific pot to the product, and do not put other pots on the heating plate of this product for cooking.
7. Please add water if steaming for long time, to avoid dry-cooking.
8. In case any defects are found to avoid any dangers, please do not disassemble the units on your own. Please send the appliance to the nearest authorized dealer or after sales service center for examination and repair.
9. Operate the appliance on a flat and dry place. Always keep the appliance dry, especially the heating plate. The appliance may be deformed or damaged when exposed to high heat or used in unstable surroundings (excess water or humidity).
10. Make sure the outer surface of the pot and the heating plate is clean and dry before plug-in.
11. Do not remove pot from heating plate before cooling. Remove with force will damage pot and heating plate.
12. Do not place any object nearby, covering or in contact with the hot steam vent of the glass lid while cooking.
13. Unplug from outlet when not in use and before cleaning. Allow to cool down before putting on or taking off parts, and before cleaning the appliance.
14. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized dealer or after sales service center for examination and repair.
15. The use of accessory attachment not recommended by the manufacturer may result in fire, electric shock or injury to persons.
16. Do not use the appliances outdoors.
17. Do not let cord hang over edge of table or counter, or touch hot surface.
18. Do not place on or near a hot gas or electric burner, or in a heated oven.
19. It is normal for smoke or smell to be emitted during first use. Continue using till smoke stops.
20. Do not use appliance for other than intended use.
21. This appliance is not intended for use by person (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
22. The stainless steel pot design is only available for this appliance. Do not put the stainless steel pot on other stove to heat. Do not put other pot on the heating base of this appliance for heating.

## PRODUCT DESCRIPTION

1. Cooker Lid Handle
2. Glass Lid
3. Stainless Steel Bowl
4. Heating Base
5. Control Panel
6. Power Cord
7. Power Regulator

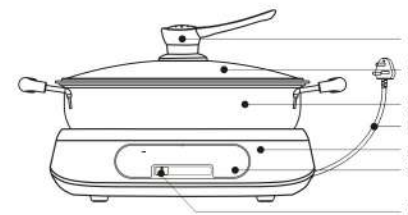

## OPERATION INSTRUCTION

### PREPARATION FOR FIRST USE

1. Remove all packaging materials. Check to make sure the appliance is not damaged. In case of any damage return the appliance to the nearest authorized dealer or after sales service center for examination and repair.
2. Before first use, clean the stainless steel bowl and glass lid thoroughly by wiping with damp sponge and mild cleaning detergent.

### OPERATION INSTRUCTION

1. Before each operation, remove any unwanted material from the surface of the pot base and tapered heater. Ensure the bowl sits firmly on the heating base before operation. Ensure the power regulator is on the left end "OFF" position.
2. Put the stainless steel bowl on the heating base and turn slightly to fit the bottom of the stainless steel bowl to the surface of the heating base. Fill in the water not over 80% full to avoid spillage which may result in electric hazard.
3. Plug the power plug into the power socket.
4. Move the power regulator to maximum and the "HEAT" light is on. Place food into stainless steel bowl after soup is boiled. Then adjust the temperature controller to your ideal power level.
5. After using, move the power regulator to "OFF" and then unplug the power plug from the power supply.

### Reminder:

1. The "HEAT" indicating light will be lit when the power regulator moves to "ON" position. Moving the power regulator to "HIGH" position, the "HEAT" indicating light will remain on constantly, and the appliance keeps working with full power. After the water or soup is boiled, move the power regulator to left between "MED" and "LOW" position, the "HEAT" indicating light will be off once the water temperature reaches the setting degree; the light will turn on again to indicate the resuming of heating process when the water temperature falls below the setting level.
2. When turning the temperature to maximum, it takes about 5 minutes to see some bubbling, and about 10-20 minutes to boil depending on the weather and water capacity filled. Please add water according to cooking time and water capacity.
3. If the water is not boiling for more than 20 minutes, please first turn off the appliance, then double check if the pot is secured on top of the heating base.