

NARITA®

INSTRUCTION MANUAL



Radiant Cooktop NT-8000(A301)

PLEASE READ THE INSTRUCTIONS IN DETAILS BEFORE USE



IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Do not touch hot surfaces
3. To protect against electrical shock, do not immerse cord or appliance in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning.
6. Do not operate any appliance with a damaged cord or plug; or after the appliance malfunctions or has been damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors, household use only.
9. Do not allow cord to hang over the edge of table , counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always switch power "off" before removing plug from wall outlet.
12. Do not use appliance for anything other than intended use.
13. Do not immerse in water.
14. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
15. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
16. A short power-supply cord is to be provided to reduce the risk of resulting from becoming entangled in or tripping over a longer cord.
17. Longer extension cords are available and may be used if care is exercised in their use.
18. If the longer extension cords power-supply cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Specifications

Item	NT-8000
Voltage	120V/60Hz
Power consumption	Max.1500W

Parts Identification:

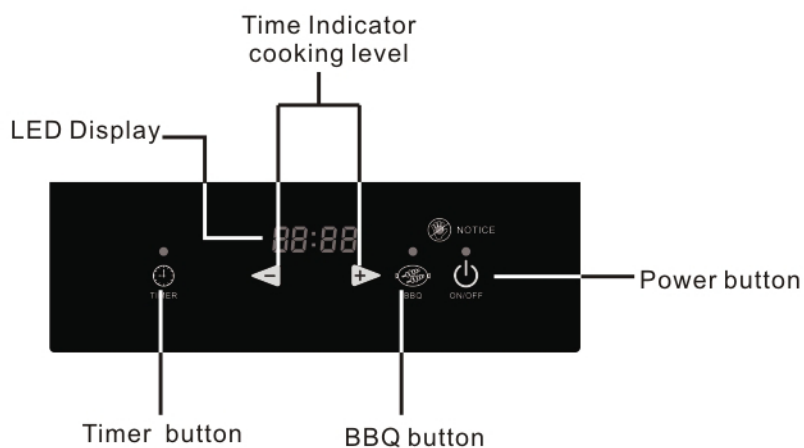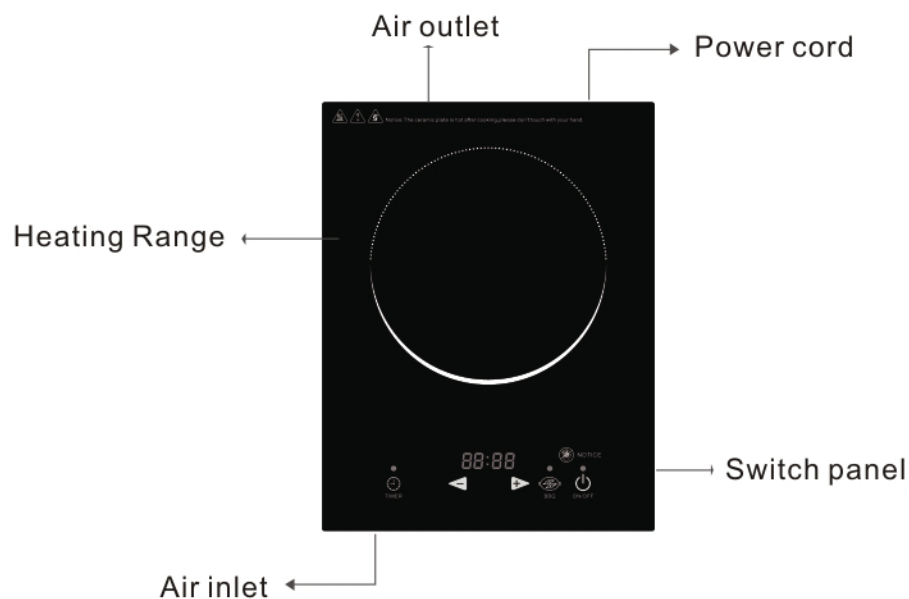

HOW TO USE

1. Read all instruction and important safeguards.
2. Remove all packaging materials.
3. Tear up all plastic bags as they can pose a risk to children.
4. Plug power cord to power source and place cookware centered on cook top.
5. Once power is connected, all indicator lights and nixie tubes will light for 1 second, LED now displays and then go out. Power light is off.
6. Press On/Off button, the LED display "----". Press the "BBQ" button, display "1100W" (default for 1 hour), press the button "-" to lowest setting -100W or press the button "+" to highest setting "1500W". Press + or - button to set the cooking level.
7. Cooking level: 100W, 300W, 500W, 700W, 900W, 1100W, 1300W and 1500W.
8. Timer: Press "Timer" button, press + or - button to set cooking time, each single press is increment of 1 minute; press and hold for increments of 10 minute. Press " - " button to jump to 8 hours setting. Timing and power showed three seconds convert again, Timer setting up to 8 hours (factory default is 2 hours).
9. When cooking is completed, press "off" button, until all indicator off, (do not touch the hot surface to avoid burns), then disconnect the power plug. Wait until the unit is cool, clean with soft cloth or sponge.
10. BBQ Function: the factory default setting is 1100W and default cooking time for 1 hour, the unit with intelligent constant temperature 500 Celsius degree.

MAINTENANCE AND ATTENTION:

1. Always unplug and let appliance cool before cleaning.
2. Do not clean with metal scouring pads. To clean the ceramic plate, use a soft sponge with a mild dishwashing detergent. Then wipe with damp towel.
3. Keep away from water source. Never immerse unit in any liquid or clean under running water.
4. Never power on without cookware, it may cause ceramic plate to overheat and crack.
5. Do not leave paper products, cooking utensils or food on the unit when not in use.
6. Deep fry is prohibited.
7. Never leave the surface elements unattended at high heat setting.
8. Never heat an unopened can on the unit as it may explode.
9. Do not damage the glass ceramic surface. If the surface is damage, stop using immediately. Turn off power and unplug.
10. Always place appliance on the flat surface.
11. Use proper pan size, select cookware having flat bottoms large enough to cover the surface heating element.
12. Do not use if the power cord is damage.

13. Do not use the unit on carpet or tablecloth, in order to avoid blocking the air inlet and outlet of cooling.
14. Do not touch the power cord and plug with wet hands.
15. Remove plug by grasping the plug.
16. Do not heat with empty cookware.\
17. Always clean the bottom of cookware before place on the unit.
18. After clean the bottom of cookware before place on the unit.
19. Do not share the outlet with other appliance, please use the power socket not less not 15 amp.

DIFFICULTY	CHECK POINTS
Power indicator light does not turn on when plugged	Make sure it is plug in correctly was there a power shortage?
Display"E2"without heat	Because the input voltage is unstable,wait until voltage back to normal
Display"E4"without heat	Short circuit problems,please contact service
Display"E5"without heat	Internal temperature is too high,please check the fan is running,or the air inlet or outlet is blocked.
Suddenly stop heating during normal operation	Please check if the appliance reached to the set timer Safety feature automatically shuts appliance off after 2 hours with no setting changes.

This unit is warranted against defective materials or workmanship for one year from the date of purchase. The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage. Abuse,mishandling,accident,or failure to follow operation instructions. Narita shall have no responsibility for any damages incidental to equipment and its sole responsibility shall be for the repair or replacement as indicated,except for shipping and handling costs. There are no implies or expressed warranties of fitness or merchantability which extend beyond the above warranty. This warranty after repair will not be extended beyond the original one year period

Note:Any unit for reimbursement or repairing should be sent back with original complete box along with the proof of purchase to the authorized service representative