

 





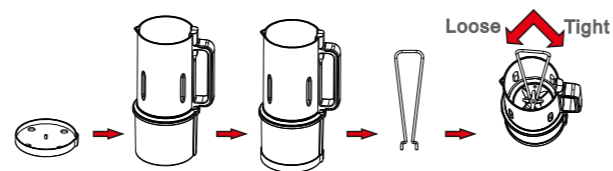 


## FUNCTION MENU

Menu	Ingredient	Operation method	Notes
 Soybean milk	Add cold water to the maximum water level of the hot drink and add 100g of ingredients.	In standby mode, select the "Soybean milk" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed. After finished, you can add some white sugar according to your preference.	Do not add too much water or ingredients, it may cause food overflow and bad taste. Do not open the small cup lid during machine operation to avoid scalding.
 Grind	Add 100g of the ingredients to grind	In standby mode, select the "Grind" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed.	Do not add too much water or ingredients, it may cause food overflow and bad taste. Do not open the small cup lid during machine operation to avoid scalding.
 Porridge	Add cold water to the maximum water level of the hot drink and add 100g of ingredients.	In standby mode, select the "Porridge" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed.	Do not add too much water or ingredients, it may cause food overflow and bad taste. Do not open the small cup lid during machine operation to avoid scalding.
 Soup	Add cold water to the maximum water level of the hot drink and add 100g of ingredients.	In standby mode, select the "Soup" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed.	Do not add too much water or ingredients, it may cause food overflow and bad taste. Do not open the small cup lid during machine operation to avoid scalding.
 Baby food	Add cold water to the maximum water level of the hot drink and add 100g of ingredients.	In standby mode, select the "Baby food" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed.	Do not add too much water or ingredients, it may cause food overflow and bad taste. Do not open the small cup lid during product operation to avoid scalding.
 Dry	After cleaning the cup, place it on the base.	In standby mode, select the "Dry" function, and the indicator flashes, then press the "Start/Cancel" button to start working. The buzzer sounds, indicating that the drying function is completed.	Under the drying function, the cup should not have too much water inside. After cleaning the cup, please pour out the water in the cup first.
 Keep warm	This function can be selected for ingredients that remain in the cup after processing.	In standby mode, select the "Keep warm" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed.	This function keeps warm for about 240 minutes and maintains temperature of about 65°C.
 Juice	Chop the fruit into pieces, add water or milk. The ingredients and water should not exceed the maximum water level.	In standby mode, select the "Juice" function, the key flashes, press the "Start/Cancel" button to start working. When the buzzer sounds, the production is completed.	Fruits and vegetables should be cut into cubes or pieces. It is normal that the rotating speed is fast and slow during working.
Clean	Put in clean water, do not exceed the maximum water level to avoid water overflow during cleaning.	In standby mode, select the "Clean" function, then press the "Start/Cancel" button to start working.	Please do not open the small lid to avoid water splashing out and causing safety risks such as scalding.

5

## DIAGRAM OF BLADE SET REPLACEMENT



- Step 1: Take a detachable cutterhead and a cup.  
 Step 2: Align the cutterhead with the bottom of the cup in the correct direction.  
 Step 3: Use the tool to clamp the blade set and tighten it clockwise (counterclockwise direction for loosening).

## SIMPLE TROUBLE SHOOTING

Ingredients can't be broken	Voltage is too low	Stabilize voltage
	Too few or too many ingredients	Add ingredients as required
	Too little water	The water volume can't be less than the minimum water level
	Blade too blunt	Contact the dealer to replace the blade
Overflowing	Too much water	Add water according to the corresponding scale
Burnt	Too many ingredients	Add the ingredients according to the corresponding scale
Grinding only, no heating	Machine circuit board malfunction	Return to factory for repair
Heating only, no grinding	Machine circuit board malfunction	Return to factory for repair
Water leakage	Blade set is loose	Return to factory for repair
Alarm or display E1 E2	Temperature sensor open circuit, cup lid not covered, cup assembly not put in place, cup lid snap broken or off.	Put the cup assembly and the cup lid in place. Or contact after-sales service.
Alarm or display E3	Boiled dry or cook pasty food for too long time resulting in high temperature of heating plate and over temperature alarm.	Pour out the food in the cup and clean it, wait for the cup assembly to cool down, then it can resume normal operation.

## TECHNICAL PARAMETERS


Product Model	YM-Q6		
Voltage	110V~	Stirring Power	400W
Frequency	60Hz	Cup Material	High boron glass cup
Heating Power	600W	Capacity	1.5L

## CLEANING NOTES








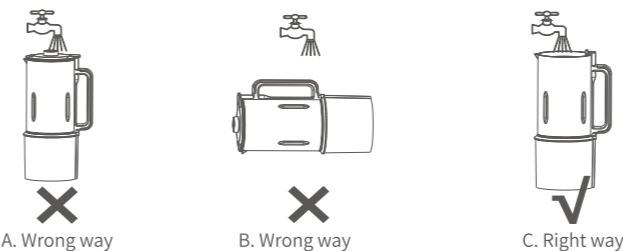






- Before cleaning, the power must be unplugged.
- When cleaning the glass cup, please be sure to pay attention to the sharp blade, be careful of cutting.
- Do not use alcohol and other chemicals to wipe the machine.
- Do not directly rinse the machine with water to avoid water into the inside of the machine base.
- If the internal residue of the glass cup is difficult to clean, you can soak it in warm

  6

- water first, then brush it with sponge in the same direction, and then rinse it with water.
- Please do not store the machine in a high place or under pressure, and keep it away from heat source and fire source.
  - Please wait the glass cup to cool down before cleaning to prevent residual heat scalding.
  - After cleaning the machine, please use a dry cloth to wipe the residual water on the outside bottom of the glass cup.
  - Please do not use wire balls, abrasive cleaning agents or corrosive liquid (such as gasoline, acetone, etc.) to clean the machine.
- Note: If contact meat and other greasy ingredients, it is recommended to use a dishcloth and dishwashing liquid for manual cleaning. When cleaning, be careful with the sharp blades, avoid cutting your hands.**



## WARNINGS

 The product should be watched by person during long-term start-up operation or use. Notice Some parts are still energized during standby, which may cause fire due to insulation deterioration or electric leakage.	 Cut off the power when going out or sleeping at night. It can avoid fire accidents caused by aging wires and save power.
 Do not spray volatile oil, paint, or insecticide on the product. It could cause electric shock, fire accidents.	 Do not let the product inhale or put into flammable substances, and do not use the product in places where mechanical oil components are floating. Can cause cracking, odor and fire accidents.
 Pull plug off	 No drenching
 Be sure to unplug when not in use for a long time or when going out. Some parts are still energized during standby, which may cause fire due to insulation deterioration or electric leakage. Do not unplug by pulling power cord.	 Do not use it in places with heavy moisture such as bathrooms. Can cause poor insulation, resulting in electric leakage or malfunction.
 Notice Please make sure to plug the power cord before use. Make sure that the plug and socket are closely fitted without looseness or incomplete insertion.	 Prohibit Do not use damaged power cords or plugs. This is the cause of electric shock, short circuit and fire.
 Notice Do not use sockets other than 110V. Use of power sources other than 110V or sockets with insufficient current is the main cause of fire.	 Prohibit Do not use multiple power cord sockets. Do not use the extension cord socket or share the power socket with other appliances, which may cause overheating and fire.
 Prohibit Do not trample power cord. Damage to the power cord or socket will cause electric leakage and burns. If the power cord is damaged, it must be replaced by the manufacturer or its service office or a similarly qualified person to avoid danger.	 No touching Do not unplug the power cord with wet hands. Do not pull the plug with wet hands, there is a risk of electric shock.

 
7



## Operating Manual

## MULTI-FUNCTION HEATING HIGH SPEED BLENDER

Pictures are for reference only. Please refer to the physical machine!

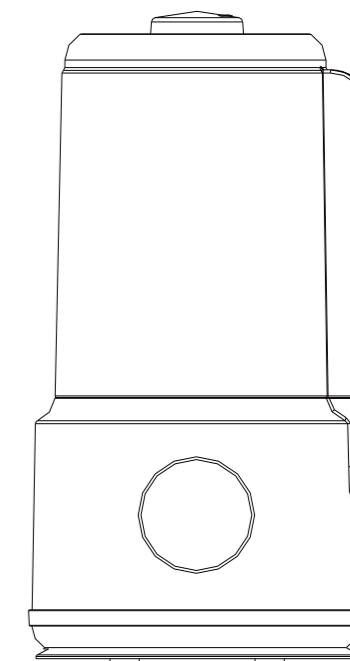

## SAFETY PRECAUTIONS

- 1.Be sure to install the cup lid in place before working.
- 2.Do not open the cup lid during work.
- 3.Please note that the steam cup is very hot. Be careful not to scald your hands.
- 4.It is strictly forbidden to immerse the stirring cup in water for cleaning.

## PRODUCT FEATURES

Our company launched a new generation of heating type wall-breaking high speed blender which is based on the popular wall-breaking blender, integrating the traditional Chinese health theory, and on the basis of a large number of tests and nutritional experiments, using microcomputer automatic intelligent control technology to upgrade ordinary cooking into a tool for getting nutrition and health. Breaking the wall means using modern high-tech cooking technology to completely break the cell wall of plants, so that the nutrients locked inside the ingredients are absorbed directly without the body's digestive process, and more importantly, to keep the active ingredients of dietary fiber, vitamins and other nutrients themselves from being destroyed by digestive juices such as stomach acid. There is no doubt that breaking the wall is the modern way to maintain health.


## NOTES

- 1.Before use, please read this manual carefully.
- 2.Please keep the power cord plug and the body of the machine dry.
- 3.Do not perform operations not described in this manual, and do not disassemble or modify this product without authorization, otherwise it will affect the life of the machine.
- 4.The power cord used must be reliably grounded, and please cut off the power before taking out or putting in the cup.
- 5.Please do not allow children to approach or touch the body of the machine during use, and do not allow children to use it alone, and do not store it in places where children can touch it to avoid unexpected accidents.
- 6.Pay attention to the storage and protection of the power cord: when taking and storing, be careful not to process, break, pull, arbitrarily twist, lengthen the power cord, and do not let heavy objects press it, so as not to break the skin of the power cord and cause unexpected failures and accidents.
- 7.If the power cord is damaged, it must be replaced by a professional from the manufacturer, maintenance department or similar department in order to avoid danger.
- 8.This machine adopts high speed motor, it is normal to have intermittent, fast and slow sound in the stirring process.
- 9.Before the machine works, please cut the prepared ingredients about 2cm long.
- 10.People with poor mobility, old age, and insufficient intelligence (lack of use experience and knowledge), as well as children, are not allowed to use this machine alone. Children should use it with the guidance of parents or safety guardians.
- 11.The temperature of the cup body will rise during the machine's operation, please do not touch the liquid inside the glass directly, and be careful of the steam and hot water spilled after boiling.
- 12.Please do not put the stirring cup directly into the refrigerator or freezer, because the rapid cooling and low temperature will cause condensation inside the cup holder, which will easily damage the machine parts and lead to malfunction of the machine.

1

- 13.Please pay attention to the placement of the machine, please do not place it in an unstable position, and need to maintain a certain distance from the wall or other items to maintain good ventilation outside the machine, to ensure the service life of the machine.
- 14.Since the machine uses an eight blade cutter and the motor speed is high, it is normal for the machine to have sound between 65~75dB during working.
- 15.This machine uses power supply of 110V~ 60Hz, please confirm before use.
- 16.Please do not put this machine near high temperature, strong magnetism, flammable and explosive gas (such as natural gas, marsh gas, etc.) to prevent device damage, malfunction or fire.
- 17.If the blade is stuck, to prevent scratching or damage to the machine, please unplug the power supply first, and then clear the ingredients blocking the blade.
- 18.When taking out the cutting blade, emptying the stirring cup and cleaning, pay attention to the sharp blade, and be careful of cutting.
- 19.Turn off the power switch and disconnect the power supply before replacing accessories or contacting moving parts.
- 20.If the product stops working during operation, it may be caused by the motor temperature control protection, please disconnect the power supply and cool it for 20-30 minutes before using it again. If it still does not work properly after thorough cooling, return it to the factory for after-sale treatment.
- 21.When not using this product for a long period, to prevent damage caused by short circuit, etc., please unplug the power supply in time.

## MACHINE STRUCTURE DIAGRAM

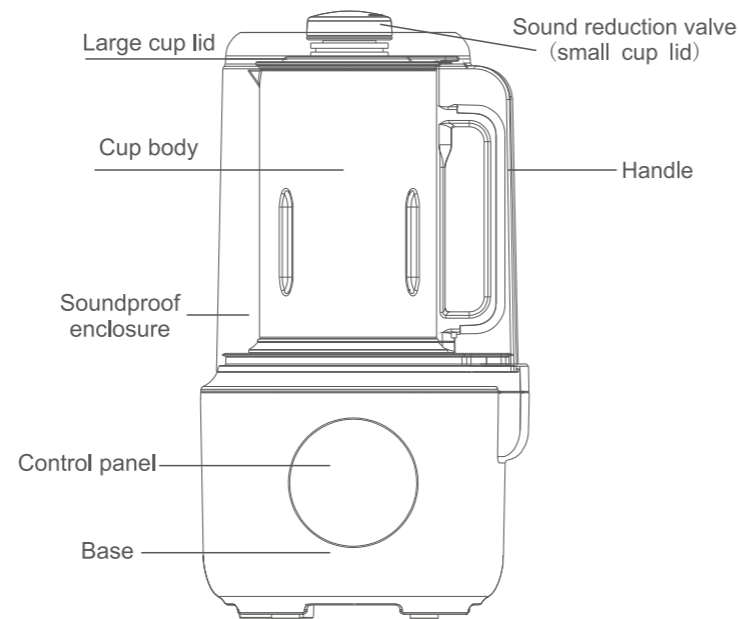


Note: The above picture is for reference only

2

## PARTS DESCRIPTION

**Large cup lid:** the large cup lid has a magnetic switch in it which controls the power of the machine. The lid has to be put on properly, so that the machine can work. Otherwise, there will be error message "E2".  
**Cup body:** high boron glass cup with heating device at the bottom with temperature sensing probe, used for cooking food.  
**Handle:** for lifting and placing cup components.  
**Control panel:** here you can select and set the desired function.  
**Base:** support the machine, with non-slip feet mat at the bottom.

## CONTROL PANEL


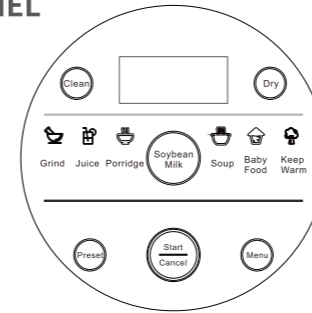


## INSTALLATION AND USE INSTRUCTIONS



Take out the machine from the package and clean the stirring cup, large cup lid, sound reduction valve (small cup lid) and other items.

**Note:** before the machine starts to work, make sure to choose the correct function to avoid making unsatisfactory drink.

- 1.Put the required ingredients into the cup body (Fig. 1), fill the cup with water to the hot drinks maximum water level. Adding water and ingredients not exceed the hot drinks maximum water level (Fig. 2).

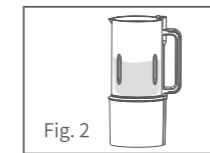
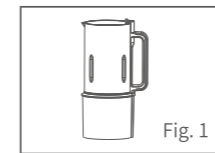


- 2.Align the position of the large cup lid handle with the direction of the cup body handle and press down (Fig. 3).

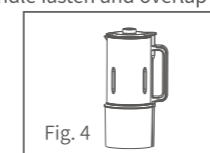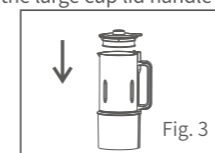

- 3.Make the large cup lid handle and cup body handle fasten and overlap (Fig. 4).

- 4.Put the assembled cup body on the base in place, and then align the soundproof enclosure with the host and large cup lid and put it in place (Fig. 5 and Fig. 6).

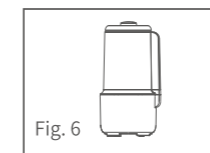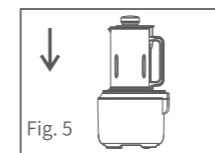

3

- 5.Plug in the power, beep 1 sound, all LED indicators are on, digital tube displays [8888]. After 1 second, it will enter the shutdown state, digital tube displays [—], LED goes off, power indicator flashes.
- 6.The "Start/Cancel" key is always on when the machine is powered on, click the "Menu" to select, the selected function begins to flash, select the desired function and click "Start/Cancel", at this time the selected function is activated, the machine begins to work.
- 7.The menu function key operation process.  
Press the "Menu" key to select the corresponding function →then press the "Start/Cancel" key to start working.  
**Note: when the machine is working, it is strictly forbidden to open the cup lid to add ingredients.**

## FUNCTION DESCRIPTION

- 1.【Select Function】: In standby mode, press the [Menu] button to select the corresponding function, and the corresponding indicator light will flash, while other indicator lights will go off. The digital tube displays the countdown time (the warm keeping function displays 65°C). If there is no touch (no button operation) within 30 seconds, it will enter shutdown status; touch the [Start/Cancel] button, the machine starts working, the selected function indicator light remains on, other indicator lights go off, and the digital tube displays time left of completion.(For Hot Drink function the time left of completion is displayed after the water is heated to boiling point. For Keep Warm function the digital tube displays temperature.)
- 2.【Memory Function】: After opening the lid, the program will stop automatically and there is one minute memory for both lid opening and cup lifting (if the lid is closed or the cup is placed back within one minute, the previous working state will continue; if the lid is closed or the cup is placed back after one minute, the machine will return to the standby state). The memory function of lid opening is one minute. After the power goes off, the machine has no memory function and it need to be restarted.
- 3.【Hot Drink Function】: After startup, and when heated to the local altitude boiling point and stabilized, the digital tube begins to display the countdown time; If the cold drink function is activated, the countdown time is displayed directly.
- 4.【Warm Keeping Function】: After the warm keeping function is activated, the temperature will be kept at 65°C for 4 hours.
- 5.【Preset Function】: Under the hot drink function, the preset function can be activated. After selecting one of Hot Drink Function, press the [Preset] button, and the digital tube will display [00:30], which means the default appointment time is 30 minutes. Then press the [Preset] button to adjust the appointment time. The adjustable range of preset time is from 10 minutes to 12 hours, which means that every touch will increase by 10 minutes. Long press to quickly adjust the time. After confirming the appointment time, press the [Start/Cancel] button again to start the appointment work (the digital tube shows the appointment countdown time, the selected function indicator light is constantly on; the preset function indicator light is flashing; and all other function lights are off).
- 6.【Work Completed】: Under Clean, Dry, Grind and Juice function, after the machine finishes its work, the buzzer beeps 5 times, the digital tube displays [END], the corresponding function indicator light flashes.  
Under Porridge, Soybean milk, Soup and Baby food function, after the machine finishes its work, the Keep warm function indicator light is on, the digital tube displays temperature.  
The function menus are as follows:  
soybean milk, grind, porridge, soup, baby food, dry, keep warm, juice, clean, preset

4