



## 九阳不用手洗的破壁豆浆机使用说明书


使用前，请仔细阅读使用说明书，并妥善保管

Joyoung | K



# 目录

请仔细阅读本使用说明书，以确保正确安全使用产品。  
本产品仅限于家庭使用，不可做为商业用途。  
请特别注意“注意事项”（第08~09页）

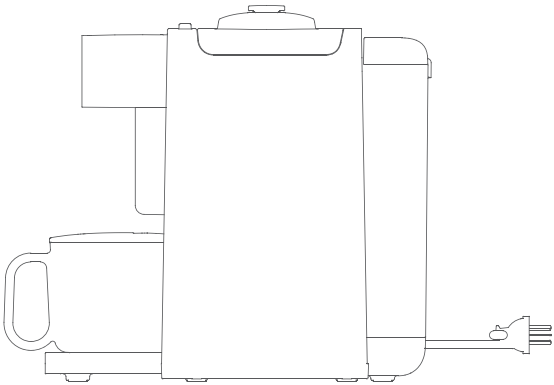

## 配件清单



咖啡滤网





量杯

使用前	
1.产品介绍	03


使用时	
2.操作指南	04
经典食谱	04
预约功能	06
3.清洗保养	06

遇到问题	
4.故障排除	07
5.故障代码	07
6.注意事项	08
7.产品规格	09
8.限用物质使用标示表	10
9.售后服务	10


产品介绍

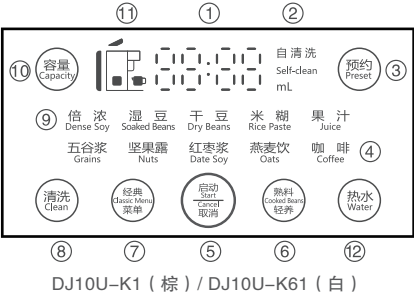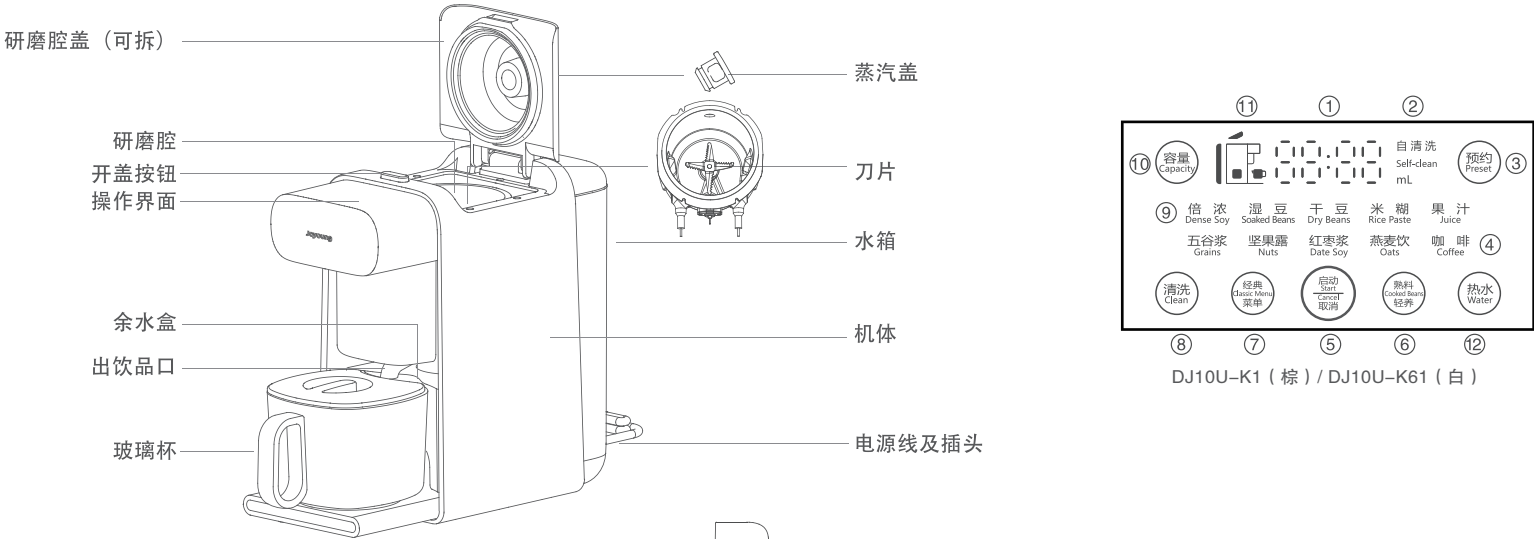

 - 1.LED时间/容量显示
- 2.状态显示
- 3.预约按键
- 4.熟料轻养菜单
- 5.启动/取消键
- 6.熟料轻养菜单选择按键
- 7.经典菜单选择按键
- 8.清洗按键，长按进入保养
- 9.经典菜单
- 10.容量选择按键
- 11.异常提示（红灯显示异常）
- 12. 热水



玻璃杯及杯盖

 

余水盒



水箱

Restricted Substance Usage Chart

Name and quantity of restricted substances

Component Name	Restricted substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr <sup>+6</sup> )	Polybrominated biphenyl ( PBB )	Polybrominated diphenyl ether ( PBDE )
Rubber parts (seal, shaft seal, etc.)	○	○	○	○	○	○
Temperature sensor	○	○	○	○	○	○
Stainless steel structural parts (steel interior body, metal lid bottom, etc.)	○	○	○	○	○	○
Parts in contact with food (cover screws, blade nut, etc.)	○	○	○	○	○	○
Electrode	○	○	○	○	○	○
Non-flame retardant plastic components (outer shell, decorations, etc.)	○	○	○	○	○	○
Heater	○	○	○	○	○	○
Thermostat	○	○	○	○	○	○
Other metal components (outer shell, etc.)	○	○	○	○	○	○
Flame retardant plastic components (motor frame, socket, coupler, etc)	○	○	○	○	○	Exceeds 0.1wt%
Other standard parts (locking handle screw, etc.)	○	○	○	Exceeds 0.1wt%	○	○
Motor, power cable, printed circuit, board assembly (PCB Board, capacitance, transformer, harness, etc.)	Exceeds 0.1wt%	○	○	○	○	Exceeds 0.1wt%

Remark 1. "exceeds 0.1 wt%" and "exceeds .01 wt%" indicate that the percentage of the restricted substance exceeds the percentage content of the reference value.

Remark 2. "○" indicates that the percentage of the restricted substance does not exceed the percentage content of the reference value

Remark 3. " — " indicates that the restricted substance is an excluded item.

Post purchase service

If the product malfunctions, please contact our customer service center for assistance

- Joyoung Soymilk Maker warranty period lasts one year;
- The warranty period starts from date of purchase on the purchase receipt or the date on the warranty card;
- The following circumstances are not covered:

- > Damage resulting from improper handling, operating, maintenance, or storage by the consumer.
  - > Damage caused by installation or repair by an unauthorized maintenance location (includes installation or repair done by consumer).
  - > No effective receipt or proof of purchase and no warranty card within the warranty period.
  - > The receipt is inconsistent with the product or the receipt is altered.
  - > Damage caused by unpreventable natural disasters.
  - > Product warranty period is expired.
  - > Damage resulting from an operating environment (voltage, humidity, temperature, airflow, etc.) that does not meet the standards as specified in the instruction manual.
  - > Damaged caused by operating the machine more than twice consecutively, using the machine for commercial purposes, or using the machine outside the parameters as specified in the instruction manual.
- This machine is designed for household use, please wait 15 minutes before using the machine again after two consecutive operations of the unit.

- ⚠ Caution

⊘

  - Keep cover closed during operation.
  - Avoid contact with the steam cover during automatic cleaning procedures as it will emit hot steam throughout the process.
  - Do not use electric or gas stoves to heat the glass cup.
  - After operating, the glass cup, dispenser, grinding compartment cover will be hot, please refrain from direct contact with skin.
  - If there is unprocessed materials remaining inside the grinding compartment that need to be removed, please use the automatic cleaning function.
  - The interior does not have a water level line. Please use the measuring cup and add ingredients according to the recipe book.
  - Please use purified water to make beverages (do not use hot water).
  - If ingredients with pigments are used to make beverages, it is possible that the grinding compartment to be stained.
  - When using ingredients with pits (e.g. dates), please first extract the pit.
  - After adding ingredients to the grinding compartment, please clear the surrounding area of food residue to ensure proper sealing of the cover.
  - Please do not disconnect power during automatic cleaning.
  - When using the scheduling function, operating durations and post operating alarm durations may vary slightly; this is a normal occurrence and will not affect the quality of the beverage.
  - Operating durations will be automatically adjusted to factor in altitude and voltage. Open the grinding compartment cover after automatically cleaning to naturally air-dry.
  - Please do not remove the glass cup during operation to prevent hot liquid from spraying out.
  - If a power outage interrupts operation for more than 30 seconds, please refrain from consuming the beverage.
  - Please be careful when hand-washing the grinding compartment to avoid accidental cuts from the blade.
  - Please ensure that the excess water basin is correctly installed before beginning automatic cleaning procedures.

- When making beverages, please do not add water directly into the grinding compartment.
- This product is designed and limited to use in conditions below 2000 meters above sea level.

Recommendations


- When making coffee, ensure that the grinding compartment is completely dry; water droplets will interfere with effectiveness of the machines coffee grinder.
- It is essential to only consume soy milk after it is thoroughly cooked.
- Please drink beverages as soon as possible after completion to ensure the optimal freshness and texture.
- Infants, individuals with weakened kidney function, and individuals with weakened gastrointestinal functions should limit their soy milk consumption.
- If the unit used continuously, it is recommended to maintain the machine and clean its parts on a weekly basis.

Product Specification

- Rated Voltage: 120V
- Rated frequency: 60Hz

Model Number	Rated power / Motor power	Capacity range	Weight	Product measurements (length*width*height)
DJ10U-K1(Brown) DJ10U-K61(White)	1000W/ 300W	300mL~ 1000mL	6.3kg	412mm x 165mm x 360mm

操作指南

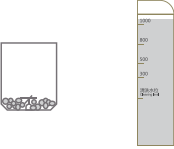

1.添加食材与水

打开研磨腔加入食材(请按说明书用量添加食材); 打开水箱加水(请务必使用纯净水), 至所需制品量的水位线以上, 并合上研磨腔盖及水箱盖, 放置好接饮品的玻璃杯。

2.菜单选择

触按”熟料轻养”或”经典菜单”按键, 选择所需功能, 选中的功能会闪烁, 每按一次, 功能会依序切换。制作咖啡时请务必将过滤网放置在玻璃杯上。

此商品有记忆功能, 开机时会默认上次使用功能。

3.容量选择

触按”容量”按键, 选择所需的容量, 每按一次LED屏幕显示会从800mL、1000mL、300mL、500mL依次切换。

咖啡、果汁、热水功能不需要进行容量选择, 果汁默认500mL, 咖啡预设300mL, 热水预设500mL。

4.启动功能

触按”启动”按键, 开始制作饮品; 1分钟内可再次触按, 取消当前功能, 再重新选择。

5.自动清洗

制作完成后, 机器将自动进入清洗程序, 不用启动”清洗”按键, 此时请勿取出余水盒, 但玻璃杯可自由拿取, 清洗完成后及时倒废水。

- 1、请按说明书用量添加食材, 以免出现溢浆、出浆嘴堵塞、粉碎不良等状况;
- 2、选用果汁功能时, 勿放纤维过多的物料(水果需切小块), 以免出浆嘴堵塞。
- 3、咖啡滤网只能用在咖啡功能上, 其他功能禁用该滤网, 以免溢出。
- 4、为获得更好的咖啡口感, 添加咖啡豆之前, 请确保研磨腔干燥, 无水渍(擦干研磨腔和研磨腔盖或开盖晾干)。
- 5、热水功能为先清洗再出水 (因接浆杯为玻璃杯, 沸水进入接浆杯后为热水)。

经典食谱

功能	食谱	1000mL	800mL	500mL	300mL
倍浓	倍浓	黄豆4/5杯约70g 约25min	黄豆7/10杯55g 约22min	黄豆2/5杯约30g 约16min	黄豆3/10杯约20g 约13min
干豆	干豆	黄豆4/5杯约70g 约24min	黄豆7/10杯55g 约20min	黄豆2/5杯约30g 约14min	黄豆3/10杯约20g 约12min
湿豆	湿豆	1杯黄豆 (充分浸泡)约80g 约23min	7/10杯黄豆 (充分浸泡)约55g 约20min	1/2杯黄豆 (充分浸泡)约40g 约15min	2/5杯黄豆 (充分浸泡)约35g 约11min

功能	食谱	1000mL	800mL	500mL	300mL
五谷浆	五谷浆	2/5杯黄豆约30g +2/5杯米约30g 约23min	3/10杯黄豆约25g +3/10杯米约20g 约21min	3/10杯黄豆约20g +1/5杯米约15g 约13min	1/5杯黄豆约15g+ 1/10杯米约10g 约约11min
	黑豆糯米	黑豆10g, 黑米20g, 黑芝麻20g, 糯米15g, 共约9/10杯 约23min	黑豆10g, 黑米20g, 黑芝麻10g, 糯米15g, 共约4/5杯 约21min	黑豆5g, 黑米10g, 黑芝麻10g, 糯米10g, 共约1/2杯 约13min	黑豆5g, 黑米10g, 黑芝麻10g, 糯米10g, 共约1/2杯 约11min
米糊	米糊	4/5杯大米80g 约25min	3/5杯大米70g 约24min	2/5杯大米50g 约19min	3/10杯大米30g 约16min
	南瓜米糊	3/5杯大米60g, 南瓜20g 约25min	2/5杯大米50g, 南瓜15g 约24min	1/2杯大米40g, 南瓜10g 约19min	3/10杯大米30g, 约约16min
红枣浆	大豆红枣浆	7/10杯黄豆55g, 红枣去核2个 约23min	3/5杯黄豆45g, 红枣去核2个 约20min	3/10杯黄豆25g, 红枣去核2个 约13min	1/5杯黄豆15g, 红枣去核2个 约10min
	百合红枣浆	黄豆40g, 红枣去核2个, 百合10g, 桂圆去核3个, 共约4/5杯 约23min	黄豆20g, 红枣去核2个, 百合10g, 桂圆去核3个, 共约3/5杯 约20min	黄豆10g, 红枣去核2个, 百合5g, 桂圆去核2个, 共约2/5杯 约13min	黄豆10g, 红枣去核1个, 百合5g, 桂圆去核1个, 共约2/5杯 约10min
	红枣枸杞浆	黄豆50g, 红枣去核2个, 枸杞5g,, 共约4/5杯 约23min	黄豆40g, 红枣去核2个, 枸杞5g,, 共约3/5杯 约20min	黄豆15g, 红枣去核2个, 枸杞5g,, 共约2/5杯 约13min	黄豆15g, 红枣去核1个, 枸杞5g,, 共约3/10杯 约10min
	坚果露	黄豆40g, 核桃15g, 大米10g, 共约4/5杯 约22min	黄豆30g, 核桃15g, 大米10g, 共约3/5杯 约20min	黄豆10g, 核桃10g, 大米10g, 共约2/5杯 约13min	黄豆5g, 核桃10g, 大米10g, 共约3/10杯 约11min


功能	食谱	1000mL	800mL	500mL	300mL		
坚果露	核桃杏仁乳	黄豆35g, 杏仁5g, 核桃15g, 共约4/5杯 约22min	黄豆25g, 杏仁5g, 核桃15g, 共约3/5杯 约20min	黄豆15g, 杏仁5g, 核桃10g, 共约2/5杯 约13min	黄豆10g, 杏仁5g, 核桃5g, 共约3/10杯 约11min		
	花生核桃乳	花生15g, 核桃15g, 黄豆15g, 大米10g, 共约4/5杯 约22min	花生10g, 核桃15g, 黄豆15g, 大米10g, 共约3/5杯 约20min	花生5g, 核桃10g, 黄豆10g, 大米5g, 共约2/5杯 约13min	花生5g, 核桃5g, 黄豆5g, 大米5g, 共约3/10杯 约11min		
燕麦浆	藜麦 紫薯燕麦	紫薯20g, 燕麦25g, 红藜麦10g, 共约1杯 约22min	紫薯15g, 燕麦15g, 红藜麦10g, 共约4/5杯 约20min	紫薯10g, 燕麦15g, 红藜麦5g, 共约1/2杯 约13min	紫薯5g, 燕麦10g, 红藜麦5g, 共约2/5杯 约11min		
	藜麦 薏米燕麦	大米15g, 红藜麦15g, 燕麦20g, 共约4/5杯 约22min	大米15g, 红藜麦10g, 燕麦20g, 共约3/5杯 约20min	大米10g, 红藜麦10g, 燕麦10g, 共约2/5杯 约13min	大米10g, 红藜麦5g, 燕麦10g, 共约3/10杯 约11min		
	山药燕麦乳	小米20g, 燕麦20g, 大米10g, 山药5g, 共约4/5杯 约22min	小米15g, 燕麦15g, 大米5g, 山药5g, 共约3/5杯 约20min	小米10g, 燕麦10g, 大米5g, 山药3g, 共约2/5杯 约13min	小米5g, 燕麦5g, 大米5g, 山药3g, 共约3/10杯 约11min		
果汁 约5min	500mL						
	苹果200g, 橘子2瓣、 柠檬汁5g	梨 200g	哈密瓜 260g	橙子 260g	火龙果 300g	草莓 260g	西瓜 350g
咖啡(300mL) 约5min		咖啡豆7/10杯约30g, 水300mL					
热水(500mL) 约6min							


Error Code	Explanation	Solution
E07	Abnormal motor signal	Test to see if the voltage is below 90V or above 140V using a regulated power supply.
E08	Abnormal internal connection port	Send to Joyoung after sales service center for service
E09	Abnormal internal connection port	Send to Joyoung after sales service center for service
E10	Drink dispense valve is blocked by foreign object	Disconnect the power to clean and remove the obstruction or send to Joyoung after sales service center for service
E11	The temperature sensor detects a circuit error	Send to Joyoung after sales service center for service


Reminder  
If the issue cannot be resolved, do not disassemble the machine; please send to Joyoung after sales service center for service.

## IMPORTANT INFORMATION


- In order to prevent injury or property damage, please observe the following safety precautions.


**WARNING**  
Failure to follow instructions could result in death or serious injuries

**CAUTION**  
Failure to follow instructions could result in small or moderate injuries

  
Topics marked "prohibited" indicate strictly impermissible subject matters


  
Topics marked "compulsory" indicates mandatory subject matters

**WARNING**



- This product is not specifically designed for use by persons with mental, sensory, and/or physical deficiencies (including children) or uninformed and/or inexperienced individuals. For the aforementioned persons, please practice proper supervision and instruction to ensure the machines safe and intended use. Please do not let children play with this product.

Error Code	Explanation	Solution
E12	The grinding compartment temperature sensor detects a circuit error	Send to Joyoung after sales service center for service
E13	Flow meter malfunction	Send to Joyoung after sales service center for service
E14	Missing zero crossing signal	Send to Joyoung after sales service center for service
E15	Grinding compartment heating timeout	Send to Joyoung after sales service center for service

- 
- Please use three socket outlets to ensure reliable grounding. Be sure to use a power socket with a rated current of 11A and an AC voltage of 120V.
  - Be sure to completely insert the power plug into its corresponding socket. If not fully inserted, it may present a fire hazard via electrical shock or overheating.
  - Please do not damage the power cord or plug. The following power cord adjustments are strictly prohibited: refitting, bending, stretching, treating with heat, compressing with heavy objects, or bundling the prongs together. If the power cord is damaged, please contact a designated Joyoung after sales service center for a repair or replacement.
  - Please do not use the machine for purposes not specified in the instruction manual.
  - Do not attempt to in any way alter, disassemble, or repair the product.
  - Please do not directly submerse the product in water or carelessly spray water at the machine.
  - Do not use external force on the dispense valve to avoid damage to the machine.
  - Mangoes, licorice, and other fiber-rich ingredients are prohibited to avoid improper grinding, which may result in an obstructed dispense valve or other damage to the machine. Please consult customer service before adding any ingredient that is not explicitly mentioned in the recipe.
  - It is prohibited to use unapproved containers to catch dispensed beverages to prevent interference with the dispense valve and causing damage to the machine.



## Troubleshooting

Error	Explanation	Solution
Indicator light will not turn on	Power plug is not properly inserted	Make sure the plug is completely plugged in
	Display panel malfunction	Send to Joyoung after sales service center for service
Indicator light is on, but the machine does not function properly	No selected program function	Select a function program
	The water reservoir is either empty or is not adequately filled	Fill the water reservoir to the appropriate water level and place the reservoir in its correct position
	Temperature sensor or water level electrode malfunction	Send to Joyoung after sales service center for service
The grinding chamber does not intake water	Water pump abnormality	Send to Joyoung after sales service center for service
	Blockage of water reservoir filter	Clean the filter at the bottom of the water reservoir
The motor works continuously without pause	Water has seeped into the machine	Send to Joyoung after sales service center for service
Heat is continuously applied without pause	Temperature sensor abnormality	Send to Joyoung after sales service center for service
Button is unresponsive	System is not fully reset after brief power disruption	Disconnect from power for two minutes before powering back on
	Display panel button malfunction	Send to Joyoung after sales service center for service
Ingredients are not completely broken down	Too much or too little ingredients	Add ingredients according to the recipe in the instruction manual
	Machine failure	Send to Joyoung after sales service center for service
	Incorrect program function selected	Choose the program function appropriate for the intended use

## Error codes


Alarm prompt: alarm prompt appears on the digital display screen, other lights are off, and the buzzer goes off.

Error code	Explanation	Solution
E01	Glass pot is not correctly positioned	Check if the glass pot is correctly positioned
E02	The water reservoir is empty or the reservoir filter is clogged.	Add water to the reservoir to the appropriate water line/clean the filter at the bottom of the reservoir
E03	The grinding compartment cover is not installed properly or at all	Check if the grinding compartment cover is attached tightly

Error code	Explanation	Solution
Overflow	Incorrect program function selected	Choose the program function appropriate for the intended use
	Too many or too large ingredients	Add ingredients according to the recipe in the instruction manual
	Machine failure	Send to Joyoung after sales service center for service
Burnt pot	Grinding compartment is not completely clean	Make sure the grinding compartment is completely clean before use
	Too much ingredients	Add ingredients according to the recipe in the instruction manual
Operating duration is abnormally long	Water temperature is too low	Use standard temperature water
	Incorrect program function selected	Choose the program function appropriate for the intended use
The beverage is not properly dispensed into the glass pot	Glass pot is not correctly positioned	Place the glass spot in its correct position
	Dispense valve abnormality	Send to Joyoung after sales service center for service
Waste water is not properly emptied into the excess water basin	Excess water basin is not correctly positioned	Place the excess water basin in its correct position
	Glass pot is not correctly positioned	Send to Joyoung after sales service center for service
	Dispense valve abnormality	Send to Joyoung after sales service center for service
Abnormal noises	Standard machine operation	Occasional noise is normal
Abnormal power connectivity	Power disconnects for under 30 seconds	After reconnecting to power, operations will resume automatically
	Power disconnects for over 30 seconds	After reconnecting to power, the machine will be reset. The remaining ingredients can be processed and removed by pressing the cleaning button. After cleaning, new ingredients may be added

Error code	Explanation	Solution
E04	The excess water basin is not correctly positioned or is not emptied	Check if the excess water basin is correctly positioned/completely empty the waste water
E05	The motor is overloaded by too much ingredients	Reduce the amount of ingredients and manually clean the machine, as there is a risk of overflow when using self-cleaning.
E06	The upper water electrode is sticky or there is too much ingredients	Clean the water electrode or reduce the amount of ingredients

## 预约功能

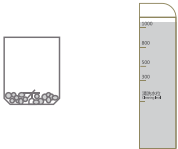

### 1.添加食材与水

打开研磨腔，加入食材；打开水箱，加水至制作饮品所需的水位线以上，并合上研磨腔及水箱盖，放置好承接饮品的玻璃杯。

### 2.菜单选择

触控选择想要预约的菜单，被选中功能灯闪烁，若不选择则默认上次使用功能。

湿豆，果汁功能不能预约。

### 3.容量选择

触控“容量”按键，选择想要的容量，系统默认模式为500mL。

### 4.时间选择

触控“预约”按键，选择想要的时间，每按一次，时间增加30分钟。可预约3-12小时。系统默认时间06:00。当长按“预约”键3s，时间显示将快进，到达所需预约时间松开按键。屏幕显示06:00，表示6小时后完成饮品。

### 5.启动功能

触控“启动”按键，开始倒计时；1分钟内可再次触控，取消当前功能，再重新选择。

## 清洗保养

### 研磨腔清洗

#### 1.功能选择

触控“清洗”按键，LED显示屏显示清洗所需时间。


#### 2.启动清洗

触控“启动”按键，开始清洗倒计时，1分钟内可再次触控，取消所选功能，重新选择。

### 保养

使用一段时间后，具油脂的食材有可能在研磨腔和刀片上结垢或染色，如有此种状况发生，建议可在研磨腔内加入少量中性清洁剂，长按“清洗”按键5秒钟，LED显示屏会显示清洗所需时间，机器会进行保养清洗。

### 清洗配件

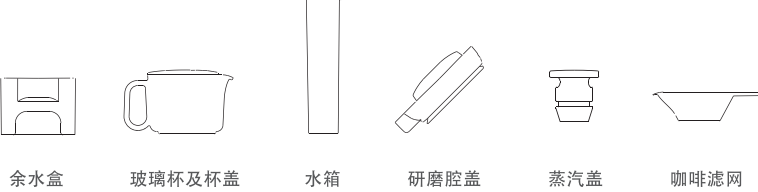

- 上述6个配件可从机器拆下使用水洗。
- 食材过多导致饮品出口堵塞时，请先将研磨腔内浓稠食材挖出，再手动疏通排浆管后，触控“清洗”功能进行清洗。
- 选择咖啡功能时，在自动清洗后研磨腔盖及蒸汽盖上可能会黏有少量残渣，可将研磨腔盖和蒸汽盖拆下清洗。
- 机器配件清洗干净后，建议擦干或风干后再组装成整机存放于干燥通风处。

故障排除

故障	原因说明	解决方式
指示灯不亮	电源线插头未插到底	将电源线插到底
	机器显示板故障	送九阳售后服务中心维修
指示灯亮、机器不工作	未选择功能程序	选择相应的功能程序
	水箱内未加水或放置不到位	水箱加水至水位刻度线且放置到位
	温度传感器或水位电极故障	送九阳售后服务中心维修
研磨腔不进水	水泵异常	送九阳售后服务中心维修
	水箱底部过滤网片堵塞	清洗水箱底部过滤网片
电机工作不停	机器内进水	送九阳售后服务中心维修
加热不停	温度传感器异常	送九阳售后服务中心维修
按键无反应	断电间隔短，系统未复位	断电2分钟后再通电使用
	显示板按键故障	送九阳售后服务中心维修
食材打不碎	食材太多或太少	按说明书食谱用量要求加入食材
	机器自身故障	送九阳售后服务中心维修
	选错功能程序	正确选择功能程序

故障代码


警报提示：数字显示屏出现警报提示，其他指示灯均为熄灭状态，且蜂鸣器鸣响

异常代码	原因说明	解决方式
E01	玻璃杯未放置到位	检查玻璃杯是否放置到位
E02	水箱无水或水箱底部过滤网片堵塞	水箱内加水至水位刻度线处/清洗水箱底部过滤网片
E03	研磨腔盖未安装或未安装到位	检查研磨腔盖是否未合紧

故障	原因说明	解决方式
溢浆	选错功能程序	正确选择功能程序
	食材太多或食材体积太大	请按说明书食谱用量加入食材
	机器自身故障	送九阳售后服务中心维修
糊锅	研磨腔未清洗干净	将研磨腔清洗干净后再使用
	加入食材太多	请按说明书食谱用量加入食材
饮品制作时间过长，其他正常	水温过低	使用常温水
	选错功能程序	正确选择功能程序
浆液未正常排在玻璃杯内	玻璃杯放置不到位	将玻璃杯放置到位
	排飲品閥自身异常	送九阳售后服务中心维修
废水未排在余水盒内	余水盒放置不到位	将余水盒放置到位
	玻璃杯放置不到位	将玻璃杯放置到位
	排飲品閥自身异常	送九阳售后服务中心维修
异常噪音	机器磨合	偶有噪音属正常情况
异常断电	断电30秒内	通电后，可自动恢复制浆
	断电超过30秒	通电后，整机复位，按清洗键处理腔内食材，可重新开始添加食材进行制浆

异常代码	原因说明	解决方式
E04	余水盒未放置到位或余水盒内废水未倒干净	确认余水盒放置到位/将余水盒内废水倒干净
E05	物料过多使得电机超载	减少物料量，手动清洗机器，使用自清洗会有溢出风险
E06	上水位电极粘黏或放置物料量过多	清洁电极或减少物料量

Scheduling function

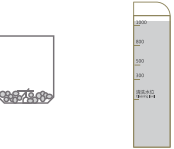

1. Walnuts ingredients and water  
Open the grinding compartment and add ingredients (please follow the instruction manual to portion ingredients); open and fill the water reservoir (please use purified water). Be sure that water level is above the line that indicates the appropriate amount volume for the intended use, and replace the cover for the grinding compartment and the water reservoir. Place the glass pot in it's designated position.

2. Menu selection  
Select the desired function that will be scheduled. If no function is selected, it will default to the last function used.

Wet beans and juice functions can not be used for the scheduling function.

3. Volume selection  
Press the “Capacity” button to select the desired volume, the default is 500mL.

4. Time selection  
Press the "Preset" button to select the desired time. Each press will increase the time by 30 minutes. The function can be used to schedule 3–12 hours ahead. The default reservation time is 6 hours. Press and hold the "Preset" button to quickly cycle the scheduling time and release when the desired duration is shown on the display. A displaying showing 6:00 indicates that the drink will be completed in 6 hours.

5. Begin operation  
Press the “Start” button to start the countdown; within 60 seconds, you can press the button again to cancel the current menu selection and reselect.

Cleaning and maintenance

Cleaning the grinding compartment




- Function selection  
Press the "clean" button. The LED display will indicate the required time for the procedure.
- Begin cleaning  
Press the "start" button to begin the countdown. You may press the button again within 60 seconds to cancel the selected function.

Maintenance

After a period of use, oily ingredients may stain or coagulate in the grinding compartment or on the blade. If this occurs, it is recommended to add a small amount of neutral detergent to the grinding compartment. Press and hold the "clean" button for 5 seconds. The LED display panel will show the time required for cleaning and maintenance

Cleaning the components

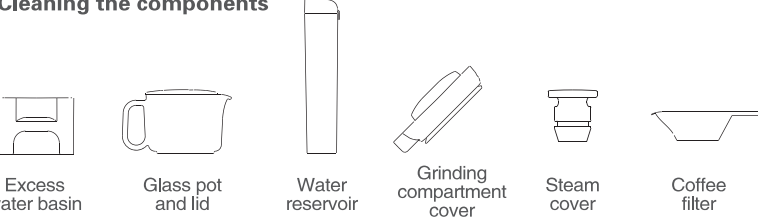

- The above 6 accessories can be removed from the machine to be cleaned with water.
- When the use of too much ingredients result in a obstructed dispense valve, please remove the remaining ingredients in the grinding compart, manually clear the dispense valve, and use the "cleaning" function to clear the system.
- When choosing the coffee function, a small amount of residue may cling to the interior of the grinding compartment cover and the steam cover. These components may be detached to be cleaned.
- After removing and cleaning machine components, it is recommended to either manually dry or let the components air dry before reassembling and the storing the device in a dry and ventilated space.



Function	Recipe	1000mL	800mL	500mL	300mL
Grains	Multi–grain soy milk	2/5 cups dried soy beans (30g)2/5 cup white rice (30g) Approx. 23 min	3/10 cups dried soy beans (25g)3/10 cup white rice (15g) Approx. 21 min	3/10 cups dried soy beans (20g)1/5 cup white rice (15g) Approx. 13 min	1/5 cups dried soy beans (15g)1/10 cup white rice (10g) Approx. 11 min
	Black rice and glutinous rice	Black soy bean(10g) Black rice(20g) Black sesame(20g) Glutinous rice(15g) 9/10 cups total ingredients Approx. 23 min	Black soy bean(10g) Black rice(20g) Black sesame(10g) Glutinous rice(15g) 4/5 cups total ingredients Approx. 21 min	Black soy bean(5g) Black rice(10g) Black sesame(10g) Glutinous rice(10g) 1/2 cups total ingredients Approx. 13 min	Black soy bean(5g) Black rice(10g) Black sesame(10g) Glutinous rice(10g) 1/2 cups total ingredients Approx. 11 min
Rice paste	Rice paste	4/5 cups white rice (80g)Approx. 25 min	3/5 cups white rice (70g)Approx. 24 min	2/5 cups white rice (70g)Approx. 19 min	3/10 cups white rice (30g)Approx. 16 min
	Pumpkin rice paste	3/5 cups rice (60g) Pumpkin(20g) Approx. 25 min	2/5 cups rice (50g) Pumpkin(15g) Approx. 24 min	1/2 cups rice (40g) Pumpkin(10g) Approx. 19 min	3/10 cups rice (30g) Pumpkin(10g) Approx. 16 min
Date Soy	Jujube soy milk	7/10 cups soybeans(55g) 2 pitted jujubes Approx. 23 min	3/5 cups soybeans(45g) 2 pitted jujubes Approx. 20 min	3/10 cups soybeans(25g) 2 pitted jujubes Approx. 13 min	1/5 cups soybeans(15g) 2 pitted jujubes Approx. 10 min
	Lily jujube soy milk	Soybeans (40g) 2 pitted jujubes Lilies(10g) 3 pitted longans 4/5 cups total ingredients Approx. 23 min	Soybeans (20g) 2 pitted jujubes Lilies(10g) 3 pitted longans 3/5 cups total ingredients Approx. 20 min	Soybeans (10g) 2 pitted jujubes Lilies(5g) 2 pitted longans 2/5 cups total ingredients Approx. 13 min	Soybeans (10g) 1 pitted jujubes Lilies(5g) 1 pitted longans 2/5 cups total ingredients Approx. 10 min
	Goji berry jujube soy milk	Soybeans (50g) 2 pitted jujubes Goji berries(5g) 4/5 cups total ingredients Approx. 23 min	Soybeans (40g) 2 pitted jujubes Goji berries(5g) 3/5 cups total ingredients Approx. 20 min	Soybeans (15g) 1 pitted jujubes Goji berries(5g) 2/5 cups total ingredients Approx. 13 min	Soybeans (15g) 1 pitted jujubes Goji berries(5g) 3/10 cups total ingredients Approx. 10 min
	Nuts	Walnut soy milk	Soybeans (30g) Walnuts (15g) White rice (10g) 4/5 cups total ingredients Approx. 22 min	Soybeans (10g) Walnuts (10g) White rice (10g) 2/5 cups total ingredients Approx. 13 min	Soybeans (5g) Walnuts (10g) White rice (10g) 3/10 cups total ingredients Approx. 11 min


Function	Recipe	1000mL	800mL	500mL	300mL	
Nuts	Walnut almond milk	Soybeans (35g) Almonds (5g) Walnuts (15g) 4/5 cups total ingredients Approx. 22 min	Soybeans (25g) Almonds (5g) Walnuts (15g) 3/5 cups total ingredients Approx. 20 min	Soybeans (15g) Almonds (5g) Walnuts (10g) 2/5 cups total ingredients Approx. 13 min	Soybeans (10g) Almonds (5g) Walnuts (5g) 3/10 cups total ingredients Approx. 11 min	
	Peanut walnut milk	Peanuts (15g) Walnuts (15g) Soybeans (15g) White rice (10g) 4/5 cups total ingredients Approx. 22 min	Peanuts (10g) Walnuts (15g) Soybeans (15g) White rice (10g) 3/5 cups total ingredients Approx. 20 min	Peanuts (5g) Walnuts (10g) Soybeans (10g) White rice (5g) 2/5 cups total ingredients Approx. 13 min	Peanuts (5g) Walnuts (5g) Soybeans (5g) White rice (5g) 3/10 cups total ingredients Approx. 11 min	
Oats	Quinoa, purple yam, and oats	Purple yam (20g) Oats (25g) Red quinoa (10g) 1 cup total ingredients Approx. 22 min	Purple yam (15g) Oats (15g) Red quinoa (10g) 4/5 cup total ingredients Approx. 20 min	Purple yam (10g) Oats (15g) Red quinoa (5g) 1/2 cup total ingredients Approx. 13 min	Purple yam (5g) Oats (10g) Red quinoa (5g) 2/5 cup total ingredients Approx. 11 min	
	Job's tears, quinoa, and oats	White rice (15g) Red quinoa (15g) Oats (20g) 4/5 cups total ingredients Approx. 23 min	White rice (15g) Red quinoa (10g) Oats (20g) 3/5 cups total ingredients Approx. 20 min	White rice (10g) Red quinoa (10g) Oats (10g) 2/5 cups total ingredients Approx. 13 min	White rice (10g) Red quinoa (5g) Oats (10g) 3/10 cups total ingredients Approx. 11 min	
	Chinese yam oat milk	Millet (20g) Oats (20g) White rice (10g) Chinese yams (5g) 4/5 cups total ingredients Approx. 22 min	Millet (15g) Oats (15g) White rice (5g) Chinese yams (5g) 3/5 cups total ingredients Approx. 20 min	Millet (10g) Oats (10g) White rice (5g) Chinese yams (3g) 2/5 cups total ingredients Approx. 13 min	Millet (5g) Oats (5g) White rice (5g) Chinese yams (3g) 3/10 cups total ingredients Approx. 11 min	
Juice Approx. 5 min	500mL					
	Apples (200g) 2 slices of orange Lemon juice (5g)	Pear (200g)	Cantaloupe (260g)	Orange (260g)	Dragon fruit (300g)	Strawberry (260g)
Coffee 300mL, Approx. 5 min		Coffee beans 7/10 cups (30g), water 300 mL				
Hot water 500mL, Approx. 5 min						


异常代码	原因说明	建议对策
E07	电压信号异常	检查电压是否低于90V或高于140V /使用稳压电源
E08	内部通信接异常口	送九阳售后服务中心维修
E09	内部通信接异常口	送九阳售后服务中心维修
E10	排饮品阀堵塞或有异物卡住	清理排浆阀或断电清洗, 或送九阳售后服务中心维修
E11	温度传感器检测电路故障	送九阳售后服务中心维修


温馨提示：如问题不能解决，切勿私自拆卸机器，请送九阳售后服务中心进行维修。以上内容如因型号或零部件变更与实物不符，请以实物为准，恕不另行通知，敬请谅解！


## 注意事项


- 为防止造成人身伤害，财产损失，请务必遵守以下安全注意事项。

**警告**  
表示如不可避免，则可能导致死亡或严重伤害的某种潜在危害情况

**注意**  
表示如不可避免，则可能导致轻度或中度伤害的某种潜在危害情况

**禁止**，不能进行的内容。

**强制**，务必执行的内容。

- **警告**
- 本产品并非设计给身体、感官或心智功能不足者(包括孩童)、或缺乏经验及知识者使用，除非有能确保其安全者给予监督或指导，才能使用本产品。请注意避免让孩童戏玩本产品。
  - 请使用三插插座，并保证可靠接地。务必选用额定电流为11A，交流电压为120V的电源插座。

异常代码	原因说明	建议对策
E12	研磨腔温度传感器检测电路故障	送九阳售后服务中心维修
E13	流量计故障	送九阳售后服务中心维修
E14	过零信号丢失	送九阳售后服务中心维修
E15	粉碎腔加热超时	送九阳售后服务中心维修

- 务必要将电源插头切实插到底。如果没有完全插入，则可能会因触电或过热而引起火灾事故。
- 请勿损坏电源线或电源插头、插座。绝对不要对电源线做以下事项：改装、弯曲、拉伸、放置高温处、将重物放在上面或捆成一束。电源线发生损坏时，请至九阳指定售后维修点维修或更换。
- 请勿用于说明书记载以外的用途。
- 绝对不要试图自动改装、分解或修理本产品。
- 请勿将本产品浸在水中，或让水喷淋。
- 禁止外力作用在出浆嘴上，以免机器损坏。

- 禁止芒果、甘草等纤维过多的食材，以免粉碎不了堵塞出浆嘴，造成机器损坏，如需添加食谱未提到的食材，请咨询客服。
- 禁止使用非自带接浆杯子放置在底座圆槽内，防止杯口干涉出浆嘴的运行导致机器损坏。

⚠ 注意

⊘

- 机器运作中请勿开盖
- 自清洗过程中，蒸汽盖会有高温蒸汽冒出，谨防烫伤。
- 严禁将玻璃杯放在瓦斯炉或电磁炉上加热。
- 饮品制作完成时，玻璃杯、出水口、研磨腔上盖温度较高，请勿用手直接触摸。
- 研磨腔有未粉碎食材需要排出时，请选用自清洗功能。
- 杯体内无水位刻度线，请用专用量杯按食谱量添加。
- 请选用纯水制作饮品(不可使用热水)。
- 如使用有色食材制作饮品，研磨腔会有染色之可能。
- 如欲使用有核的食材(如:红枣)，请先去核。
- 研磨腔加料后，请清理腔周边食材，以免无法合盖密封。
- 自动清洗时请勿断电。
- 使用预约功能时，饮品制作完毕的警报时间与标准的制作时间相比较，有微小误差属于正常现象，不影响质量。
- 制作时间会因为海拔及电压自动调整，清洗完成后请打开研磨腔盖，让水自然风干。
- 制作过程中，请勿取走玻璃杯，以避免饮品喷洒造成烫伤。
- 如异常断电超过30秒，请勿饮用所制饮品。
- 手动清洗研磨腔时，请小心刀片以免伤手。
- 自动清洗前请确保余水盒安装到位。
- 制作饮品时，请勿自行向研磨腔中加水。
- 本产品仅限于海拔2000米以下地区使用。

！

使用提示

- 制作咖啡时请保证粉碎腔内干燥，腔内有水珠将会影响咖啡粉碎效果。
- 豆浆一定要煮熟才能饮用。
- 饮品制作完成后请尽早饮用，以维持新鲜口感。
- 婴儿、肾功能衰竭、肠胃功能较弱的人群请酌量饮用豆浆。
- 连续使用时，建议每周对机器进行保养和配件清洗。

产品规格

- 额定电压：120V
- 额定频率：60Hz

产品型号	额定功率/电机功率	容量范围	净重	产品尺寸(长x宽x高)
DJ10U-K1 (棕) DJ10U-K61 (白)	1000W/ 300W	300mL~ 1000mL	6.3kg	412mm x 165mm x 360mm

！

使用提示

- 制作咖啡时请保证粉碎腔内干燥，腔内有水珠将会影响咖啡粉碎效果。
- 豆浆一定要煮熟才能饮用。
- 饮品制作完成后请尽早饮用，以维持新鲜口感。
- 婴儿、肾功能衰竭、肠胃功能较弱的人群请酌量饮用豆浆。
- 连续使用时，建议每周对机器进行保养和配件清洗。

Operation guide

倍浓  
Dense Soy

五谷浆  
Grain

浸泡豆  
Soaked Beans

坚果露  
Nuts

干豆  
Dry Beans

红枣浆  
Date Soy

米糊  
Rice Paste

燕麦饮  
Oats

果汁  
Juice

咖啡  
Coffee

经典  
Classic Menu

容量  
Capacity

DJ10U-K1(Brown)

DJ10U-K61(White)

500

容量  
Capacity

启动  
Start

取消  
Cancel

启动  
Start

取消  
Cancel

1. Adding ingredients and water

Open the grinding compartment and add ingredients (please follow the instruction manual to portion ingredients); open and fill the water reservoir (please use purified water). Be sure that water level is above the line that indicates the appropriate amount volume for the intended use, and replace the cover for the grinding compartment and the water reservoir. Place the glass pot in it's designated position.

2. Menu selection

Press the "cooked beans" or "classic menu" button to select the desired function. The selection will flash, and each successive press of the button will cycle the selected option. When making coffee, be sure to place the filter above the glass pot.

When powered on, the machine will default to the last function that was used.

3. Volume selection

Press the "Capacity" button to select the desired capacity. Each press of the LED display will cycle the selection between 800mL, 1000mL, 300mL, and 500mL.

Coffee, juice, and hot water cannot be adjusted for volume. Juice is set to 500mL, coffee is set to 300mL, and hot water is set to 500mL.

4. Begin operation

Press the “Start” button to begin operation; press again within 60 seconds to cancel the current selection to choose a different function.

press again to cancel the current menu pulping and re-select.

5. Automatic cleaning

After production concludes,the machine will automatically begin its cleaning procedures without needing to press the "clean" button.During this process, please do not remove the excess water basin; however, the glass pot may be freely removed at this time. The waste water can be drained after the cleaning is completed.

清洗  
Clean

1. When using the classic menu, please add ingredients according to the recipes in the instruction manual in order to avoid incidents of overflowing, clogging, and damage.

2. When using the juice function, avoid using excessive fiber-rich ingredients to avoid obstruction of the dispense valve.

3. The coffee filter is intended for exclusive use with the coffee function. Please do not use the filter for other functions to avoid overflow.

4. To achieve a better tasting coffee, please ensure that the grinding compartment is completely dry with no water stains (open the cover to let the grinding compartment and cover dry).

5. The hot water function will clean first and then dispense water (since the pot is made of glass, the boiling water will become hot water.



Classic menu

Function	Recipe	1000mL	800mL	500mL	300mL
Dense Soy	Dense Soy	4/5 cups soybeans (70g)Approx. 25 min	7/10 cups soybeans (55g)Approx. 22 min	2/5 cups soybeans (55g)Approx. 16 min	3/10 cups soybeans (20g)Approx. 13 min
Dry Beans	Dry Beans	4/5 cups soybeans (70g)Approx. 24 min	7/10 cups soybeans (55g)Approx. 20 min	2/5 cups soybeans (30g)Approx. 15min	3/10 cups soybeans (20g)Approx. 12min
Soaked Beans	Soaked Beans	1 cup fully soaked soybeans (80g) Approx. 23 min	7/10 cup fully soaked soybeans (55g) Approx. 20 min	1/2 cup fully soaked soybeans (40g) Approx. 15 min	2/5 cup fully soaked soybeans (35g) Approx. 11 min

09

04

Product description

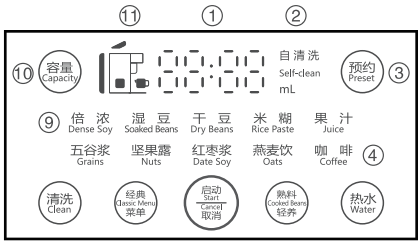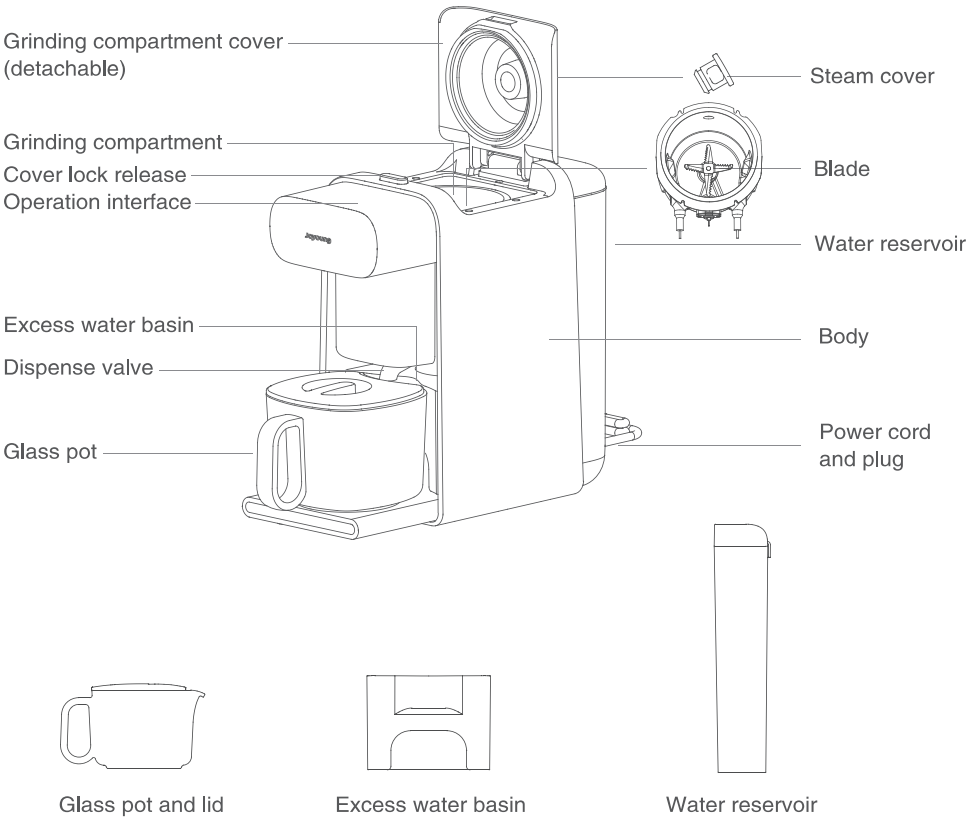

DJ10U-K1(Brown) / DJ10U-K61(White)

- 1. LED time/volume display
- 2. Status display
- 3. Scheduling button
- 4. Precooked ingredients menu
- 5. Start/Cancel button
- 6. Precooked ingredients menu selection button
- 7. Classic menu function selection button
- 8. Cleaning button (press and hold for maintenance)
- 9. Classic menu
- 10. Volume selection button
- 11. Error prompt (red light is abnormal)
- 12. Hot water

限用物质使用标示表

限用物质的名称和含量表

部件名称	限用物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr <sup>6+</sup> )	多溴联苯(PBB)	多溴二苯醚(PBDE)
橡胶件 (密封垫、轴密封等)	○	○	○	○	○	○
温度传感器	○	○	○	○	○	○
不锈钢结构件 (钢杯体、金属下盖、电机轴等)	○	○	○	○	○	○
与食品接触标准件 (合盖螺钉、锁刀片螺母等)	○	○	○	○	○	○
电极	○	○	○	○	○	○
非阻燃塑料结构件 (外壳、装饰件等)	○	○	○	○	○	○
电热器	○	○	○	○	○	○
温控器	○	○	○	○	○	○
其它金属结构件 (外壳等)	○	○	○	○	○	○
阻燃塑料结构件(电机支架、插座、耦合器等)	○	○	○	○	○	超出 0.1wt%
其它标准件 (锁附手柄螺钉等)	○	○	○	超出 0.1wt%	○	○
电机、电源线、印刷线路板组件 (PCB板、电容、变压器、线束等)	超出 0.1wt%	○	○	○	○	超出 0.1wt%

備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 系指限用物质之百分比含量超出百分比含量基准值。

備考2. “○” 系指该项限用物质之百分比含量未超出百分比含量基准值。

備考3. “—” 系指该项限用物质为排除项目。

售后服务

产品如有故障,请与本公司的特约维修服务中心联系。


- 1. 九阳豆浆机保修期为一年;
- 2. 保修期的起始日期以购买发票日期为准;
- 3. 凡下列情况者,不在保修范围内:

- > 消费者因搬运、使用、维护、保管不当造成产品损坏。
- > 非我公司指定的维修点安装、维修造成损坏 (包括消费者自行安装或拆卸修理)。
- > 无有效发票或购买证明,且无法证明属于保修期内。
- > 发票与实物不符或涂改。
- > 因不可抗拒的自然灾害造成损坏。
- > 超过保修期。
- > 使用环境 (如电压、湿度、温度、通风条件等) 不符合产品说明书的表述,造成损坏。
- > 本机器只适合家庭使用,因连续使用两次 (不含) 以上及商业用途或未遵守本说明书使用引起的故障或损坏,连续使用两次后请间隔15分钟后再使用。

# Contents

Please read this instruction manual carefully to ensure the safe and correct use of the Joyoung fully-automatic soy milk machine.  
This product is intended for home use only.

Please pay special attention to the "IMPORTANT INFORMATION" section (pages 08–09)

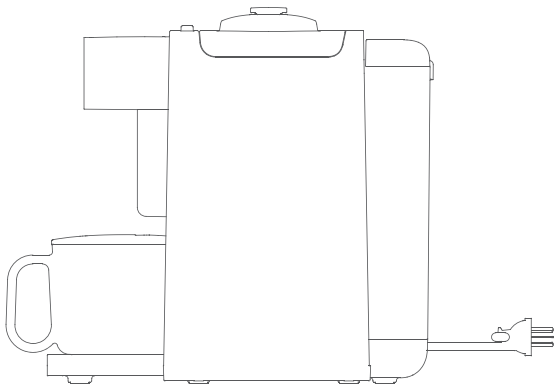

# Parts



Coffee filter



Measuring cup

Before operation	
1. product introduction	03
General usage	
2. Operation guide	04
Classic menu	04
Reservation	06
3.Cleaning and maintenance	06
Encountering problems	
4. Troubleshooting	07
5. Error codes	07
6. Precautions	08
7. Basic parameters	09
8. Restricted hazardous substances	10
9. After sales service	10